

# Introduction


The Fluke ScopeMeter test tools (93, 95 and 97) were first introduced in 1991 and revolutionised field troubleshooting and service. For the first time technicians could carry a powerful oscilloscope, a full-featured digital multimeter and a 4-digit frequency counter all in one portable, handheld instrument.


The new ScopeMeter IIB with ultra bright high contrast display uses sophisticated technology to provide 25 MSPS acquisition rate and 100MHz bandwidth for the ScopeMeter 99B and 105B and 60MHz bandwidth for the rest of the series. The series IIB features random repetitive sampling rates of 5 Gigasamples/sec for the 99B and 105B, 2.5 Gigasamples/sec for the 92B and 96B.

Video triggering modes are available on all series IIB to provide both field and line triggering with a line counter and support of the major video standards.

All the new Fluke Series IIB ScopeMeter models give one button access to automatic measurements. From the Measure menu simply select the measurement you want to make and ScopeMeter Series IIB automatically configures itself for that measurement. As the selection is being chosen an 'on-line' assistance message appears in the centre of the screen to let you know something about the selected choice. The information icon "i" also appears to offer full screen detail about the hook up and what the measurement will provide.

Once the configuration is complete and the signal is displayed, Continuous Autoset takes over and tracks any change to the input signal and makes any necessary adjustments to maintain a measurable waveform display. Simply stated it ''locks'' on the signal and 'tracks' any changes in that signal.

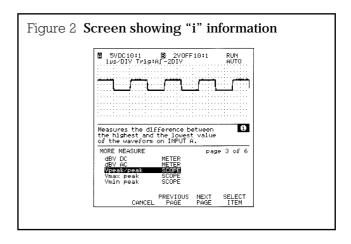

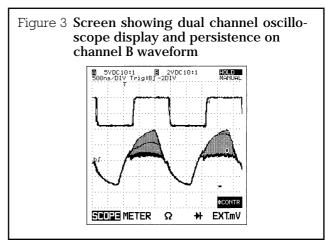

# Product features in greater depth

#### Memory/storage

The extra large memory on all models has plenty of room to store setups, waveforms and screens for future reference, printing or uploading to a PC for analysis. The models 105B, 99B and 96B allow waveforms to be printed directly via the optically isolated RS-232 serial interface (**RS** stock no. 205-738) to Epson FX and HP compatible printers. The Fluke 99B and 105B also allow the transfer of waveforms and measurement data to and from a PC, as well as remote control. All four models allow screen image transfers to a PC for printing or use in documents.

The large non-volatile memory allows the Fluke 99B and 105B to save up to 40 set-ups, 20 waveforms and 10 screens; the Fluke 96B has storage for 5 screens, 10 waveforms and 20 setups.

#### Video triggering

The series IIB has video triggering modes including TV Field 1, Field 2, Line or selectable line number allowing you to lock onto video signals. The major interlaced video standards are supported including PAL, PAL/M, NTSC & SECAM and non interlaced video with line frequencies between 14kHz and 65kHz.

#### Portable and rugged


Whether troubleshooting electronic, machine control, electrical, telecommunications or computer circuits, ScopeMeter Series IIB makes it easy to get the right answers where ever and when ever you need them. Sealed against the elements, protected by a shock resistant holster and battery or line powered.

The ScopeMeter has been designed and tested in accordance with IEC publication 1010. Safety Requirements for Electrical Equipment for measurement, control and laboratory use.

#### "Automatic" setup - easy to use controls


The ScopeMeter Series IIB interface is designed around the most common circuit measurements likely to be made. The Automatic Measurements with Continuous Autoset from the Direct Access menu saves time and simplifies set up. Even though this new environment of automatic measurements saves time, both the scope and meter can be operated manually to meet any additional analysis needs the user may have.

Easy to use key layout is a key feature, the key layout below shows the functionality of the Fluke 99B key design.

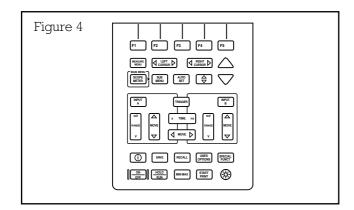


#### Direct Access Measure menu for instant setups


One touch to select the Measure menu gives you direct access to a pop-up menu of more than 30 measurements as well as 4 short lists for those rush jobs. Simply select the measurement and Series IIB automatically sets itself up to do the job. It's a lot quicker for experienced scope users, and easier for users who know the measurement they want but don't quite know how to set up the instrument.

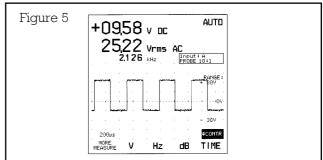

Step 1: Selecting the Measure menu brings up the main menu bar of both short and long lists

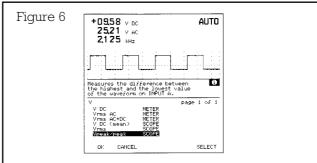

Step 2: The F2 function key opens the Volts menu. Select with blue arrow keys

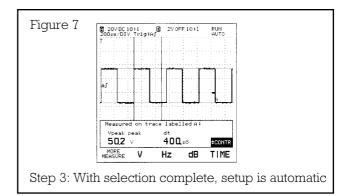


# 5GS/s, 200 ps random repetitive sampling for better accuracy

Verifying repetitive signals - such as clock pulses, carrier waves, and fast rise time signals - in computing or communications equipment can be difficult because high frequencies are hard to capture. At the higher timebase speeds used to capture these higher frequencies, Fluke ScopeMeter series IIB uses 'random repetitive' sampling - the technique used in larger, higher priced lab scopes. This technique takes one or more samples following multiple triggers from a repetitive signal. The microprocessor in ScopeMeter series IIB arranges all the samples and displays them in order. On the 99B and 105B at the highest timebase speed of 5ns/dv, each division is represented by 25 true samples. That delivers a 200 picosecond time resolution - the equivalent of a sampling rate of 5GS/s.

# Min Max TrendPlot $\ensuremath{^{\rm TM}}$ expands the Meter Min/Max function

Fluke's unique new TrendPlot feature presents changing Min/Max/Avg values in graphic form. The analog-like grayscale, variable persistence display clearly distinguishes between the three measurements to give you an instant read of spikes, sags and transients. TrendPlot is automatically activated with a touch of the Min/Max button and can display, scale and record up to 40 days of signal trend. TrendPlot provides signal detail to pinpoint intermittent problems that are hard to track down otherwise.

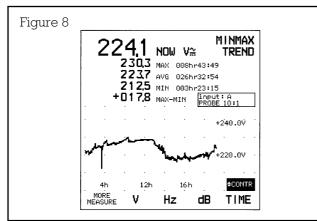


#### Deep 30K memory

Memory depth is important for capturing events. The more samples storage memory the more accurately you can record and examine long cycles. For single shot events such as switch or relay closure or a power supply startup, all samples must be taken following a single trigger, in one sequence. Samples must be fast enough to capture the fastest detail of the event and memory must be deep enough to store sufficient samples. ScopeMeter IIB models feature 30K memory in ScopeRecord mode to meet this requirement. ScopeRecord shows events as long as 120 scope screens with zoom facility to magnify signal detail.


#### Information at your finger tip

No matter what function is in use, the on-line information provides instant help. Get instant answers on how to connect for complex measurements, how to use a special function or to better understand what really happens when a function is selected. The best part is, all that information is with you on the job to make your task easier whether you're 40 feet up, 100 miles out, or in the middle of a plant or office building.

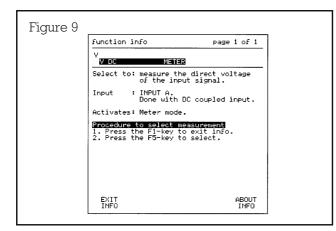

#### Backlit screen for easy reading


Whether you're working in direct sunlight or in the dark, the bright backlit LCD display on all models presents a clear picture of the situation. Digits and waveforms are presented big and bold enough to be read across the room. And the high reflectivity display provides better visibility in normal light as well.

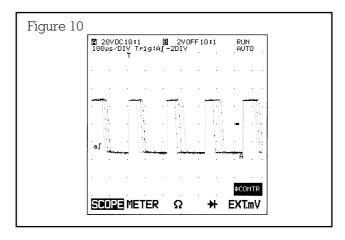

#### "Analogue-like" display

The display technique employed, produces waveform displays with analogue characteristics. The Min Max Envelope on both inputs reveals signal phenomena not visible before in a portable digital scope, like the variations of AM and FM signals. This feature is invaluable where the need is to see signals which had previously been seen only on an analogue scope.

Add variable persistence to this new technique and you have a portable combined instrument which can replace many analogue scopes. This new technique also adds to the TrendPlot display with grey scale shading of low intensity signals.

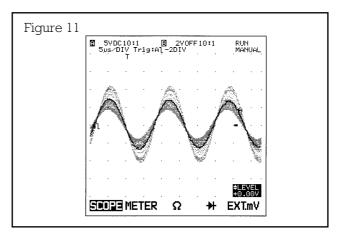

#### Scope power in the palm of your hand

Despite its compact size, ScopeMeter Series IIB offers performance to meet many demanding applications:

Model 99B & 105B deliver a powerful 100MHz bandwidth. Model 92B and 96B deliver a full 60 MHz bandwidth.

A 25 megasamples per second acquisition rate lets you digitise, view and store single shot phenomena with 40 ns resolution.

The Fluke 92B, 96B, 99B and 105B all feature dual inputs. All models feature true 8 bit vertical resolution, a broad range of triggering functions and a roll mode for low frequency signal analysis.

#### Advanced calculations for in-depth analysis

Easy-to-use cursors allow waveform tracking while displaying up to five measurements simultaneously in the Models 96B, 99B and 105B. Simply make selections from the pop-up menu or the Measure menu and read the display.

Powerful waveform maths on the Fluke 99B and 105B lets you see hidden waveform data with basic arithmetic functions and waveform integration. In addition, digital filters smooth the waveform to reduce unwanted noise or switching transients to provide a basis for more accurate calculations. Even though the ScopeMeter Series IIB is a lightweight, you can count on it to deliver heavyweight performance wherever you go.

# A full featured digital multimeter that stands on its own

Pushing just two buttons on the ScopeMeter Series IIB brings up the full set of meter functions while continuously viewing the new screen-width waveform display.


#### True precision in a wide range of applications

ScopeMeter Series IIB measures and displays up to four parameters simultaneously with 3<sup>2</sup>/<sub>3</sub> digit resolution. True rms ac or ac+dc accurately measures the voltage of square waves, pulse trains, noise and other non-sinusoidal waveforms up to 5MHz. This wide bandwidth gives accurate measurements in applications which elude even dedicated ac meters. Fast autoranging automatically selects the range with the greatest accuracy and resolution, or you can set the range manually. With ranges from 100mV to 300V, ScopeMeter Series IIB offers maximum sensitivity for low level signals.


#### Innovative functions add accuracy and convenience

With Min Max Avg recording you can connect the ScopeMeter Series IIB to record a signal for seconds or days while you continue with other tasks. The highest, lowest and average of all readings are recorded with a time stamp and an audible tone is emitted with new minimum and maximum readings. This is automatically linked with the new TrendPlot allowing you to view Min Max Avg trends in graph form.

For additional hands-free convenience, TouchHold® captures and holds a steady measurement on the display, updating automatically with each new test.

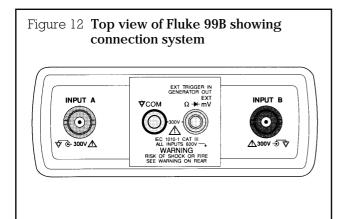

#### ScopeMeter Series IIB - The list

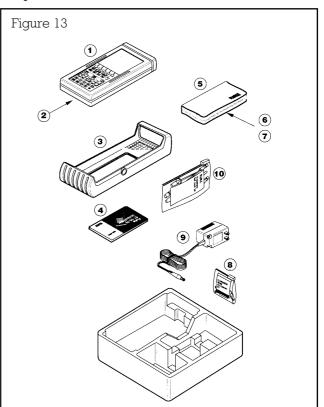

- 1 ScopeMeter test tool
- 2 NiCd battery pack (installed)
- 3 Protective holster
- 4 Users manual
- 5 Accessory case
- 6 Set of two probes
- 7 Set of two industrial alligator clips for scope probes
- 8 Probe accessory set includes:
  - HF adaptors ( $2 \times$  black)
  - High voltage test pins (red and grey)
  - Probe tip to banana adaptors (red and grey)
  - Mini test hooks (red and grey)
  - Trim screwdrivers (red and grey)

9 Power adaptor/battery charger

10 Multimeter test lead set includes:

- Test leads (red and black)
- Industrial test probes (red and black)
- Industrial alligator clip (black)
- Banana adaptors (red and black)

ScopeMeter 105B is supplied with the following additional items:-

- 1 Optical-to-RS232 interface lead
- 2 Flukeview for Windows software on  $3^{1\!\prime_2}$  in floppy disk
- 3 Flukeview users manual
- 4 9 pin male to 25 pin female adaptor
- 5 25 pin male-male gender changer
- 6 Hard carrying case.

# Selection guide

	Fluke 105B	Fluke 99B	Fluke 96B	Fluke 92B	
Bandwidth	100MHz dual input		60MHz dual input		
Sample rate (single shot)		25 Megasamples/second			
Measure menu		Direct access to 33 measurements. The best operating mode is automatically selected			cess to 18 nts. The best 9 mode is ly selected
Continuous autoset		Hands-free signa	l probing. Tracks inp elects the proper rang	ut signal changes	-
On-line information			-line information abou		
			and operation		
Meter MIN MAX TrendPlot		Monitor any meter reading automatically with simultaneous graphs of the MIN, MAX and AVG values from 15 sec/div (120 seconds) to 8 days/div (40 days). Automatic vertical scaling and time compression			L
Scope MIN MAX			eforms from both inpu	-	
Envelope mode			xcursions with a gray	-	
Multimeter display			000 counts). With a fu tomatic scope wavefo		
True RMS Volts		AC or AC	+DC up to 600V (170	OV Pk-Pk)	
Diode test			Up to 2.8V		
Continuity beeper			Yes		
Time/division	5ns/div to 60 sec/div		10ns/div to 60 sec/div	7	
Volts/division	lmV/div to 100V/div				
Digital trigger delay	By number of cycles, events, time or zoom mode				
Special multimeter modes	Relative (zero), % scale, smoothing™, change alert™ dBm, dBV, dBW, audio or RF Watts, Hz, pulse width, duty cycle, RPM; measure Amps,				
Scope input scaling		Measure A	mps with optional cur	rent probes	
Glitch capture	≥40ns				
Scope waveform processing	Analog-like greyscale display and waveform averaging				
Display	Н	High contrast, cold cathode electro lu		scent back-lit displ	ay
RS-232 interface via optional adaptor /cable, 600V isolation	set wave & sci or di	Transfer setups waveforms, & screens* or directly print		Capture	screen*
Screen memories	10		5		
Waveform memories	20		10		
Set-up memories	40		20		
Oscilloscope cursor readings		15 measurements display 5 simultaneously			
Waveform mathematics	mul inver	add, subtract multiply, invert, filter or integrate			
Signal generator output		Sinewave or squarewave			
Component tester output	Voltage or current ramp				

\* With optional FlukeView PC software and adaptor/cable, supplied complete with the ScopeMeter 105B or as a separate option for the ScopeMeter 99B and 96B.

#### Interface of ScopeMeter Series II

	105	99	96	92
Screen dump using application software	•	•	•	•
Direct output to printer	•	•	•	
Remote control via computer interface	•	•		

	Measure menu		Scop	eMeter main n	nodes	
		Scope	Meter	Ohm	Diode	Ext.mV
Voltage measurements		*				
Vdc						
Vrms ac						
Vrms ac+dc						
Vrms ac+dc (dc blocked)						
Vdc (mean)						
Vrms						
dV						
Vpeak/peak		-				
V max. peak						
V min. peak	-	-				
V at LEFT	-					
V at RIGHT						
Accessory (mV)						
			-			
Frequency measurements Hz	_					
Duty cycle			<b>■</b>			
RPM 1						
RPM 2						
Power measurements						
dBV dc						
dBV ac						
dBV ac+dc						
dBV ac+dc (dc blocked)						
dBm dc						
dBm ac						
dBm ac+dc						
dBm ac+dc (dc blocked)						
dBW dc						
dBW ac						
dBW ac+dc						
dBW ac+dc (dc blocked)						
Watt dc						
Watt ac						
Watt ac+dc						
Watt ac+dc (dc blocked)						
Time measurements						
Pulse width						
dt						
1/dt		-				
Rise time		-				
trig to LEFT	-	-				
trig to RIGHT						
phase						
Ampere measurements (wit	h ontional current					
A dc (meter)		ciamps)				
A ac (meter)						
A ac+dc (meter)						
A dc (EXT.mV)						•
A ac (EXT.mV)						
A ac+dc (EXT.mV)		4		-		
All scope voltage measurem			• `			
Temperature measurement	_	nperature a	ccessories)			
°C						
°F						
Resistance measurements						
Ohm						
Continuity						
Continuity						
Diode measurements Diode						

# Fluke<sup>®</sup> windows based software for the ScopeMeter Series IIB

#### **RS** stock no. 438-253

FlukeView ScopeMeter software will run on PCs in the Windows environment and can communicate with ScopeMeter via the RS-232 serial interface supplied with the ScopeMeter 105B or as a separate option (**RS** stock no. 205-738). ScopeMeter 97, the Series IIB ScopeMeter 99B and ScopeMeter 105B, are supported by this powerful software package.

#### Features of FlukeView

#### Before the measurement


• Load the ScopeMeter with predefined set-ups from a file, for increased ease of use

#### During the measurement

- On-line text and graphic display of meter readings for monitoring slow changing signals
- Transfer and store waveforms for later analysis

#### After the measurement

- Transfer and store ScopeMeter screen images for hard copy printing from a PC.
- Store ScopeMeter screen images in popular file formats for documenting measurements in a word processor like Word or WordPerfect.
- Analyse and visually compare waveforms for a closer look at detail.
- Manager the organised storage of waveforms for easy retrieval.
- **Documenting.** Capture waveforms and measurements data from the ScopeMeter screen to the PC. Print out complete screen directly or store graphical data in a popular file format and import into your favourite word processor or spreadsheet.
- Archiving. Waveform storage and retrieval with text annotations like measurements conditions and instrument set-ups. Ideal for creating your own library of waveforms for reference and comparison purposes, view your measurements real time on your PC.
- Analysis. Get valuable extra measurement data, reveal relationships and conditions that could otherwise remain hidden. You can also log meter readings to monitor and analyse moving signals and related events.
- On installation. Once you have installed Fluke-View a whole host of facilities become open to you. Under the Windows Program Manager you will find the "FlukeView" files. The icons that appear in the FlukeView file are the major components for your use.

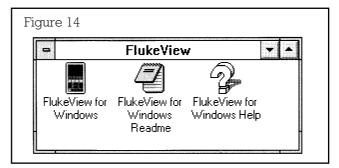



Once you have loaded FlukeView you are presented with the Windows screen, with a tool bar at the top of the screen containing a number of icons. These icons are the most popular facilities that you are likely to use. Beyond this there are the normal pull down menus enabling the user to configure and analyse information at will.

The list below shows some of the tool bar icons and what they do.

Shortcut key	Menu command	Toolbar button
Ctrl + O	File - Open	c <del>è</del>
Ctrl + S	File - Save As	
Ctrl + P	File - Print	8
Ctrl + C	Edit - Copy	ła
Ctrl + I	Display - Instrument Screen	Ø
Ctrl + W	Display - Waveform	A,
Ctrl + M	Display - Meter Reading	VΩ Hz
Shift + F4	Window - Tile Horizontal	
Shift + F6	Window - Tile Vertical	
Shift + F5	Window - Cascade	
Alt + letter	Selects the menu command with the underlined letter. e.g. Alt+D+O displays the Display - Mode dialog box	
Alt + I + T	Instrument - Setup to file	
Alt + I + F	Instrument - Setup from file	
Alt + F + V	File - Preview	à
Esc		STOP

The following waveforms are examples of some of the information/analysis features of the powerful FlukeView software.

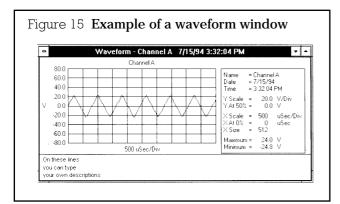

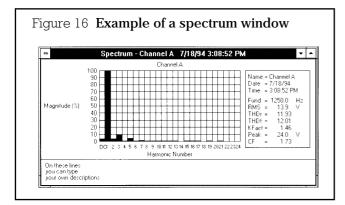

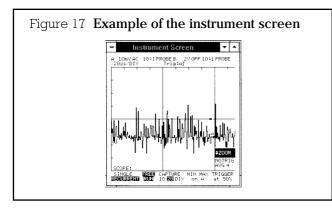


Figure 17 is an example of the instrument screen showing the Fluke ScopeMeter 99B screen with the information directly transferred across.

# Specifications and characteristics

### Scope mode

#### Continuous auto set

Hands-free signal probing. Continuously follows input signals from 15Hz to 50MHz and automatically selects the proper time base, input range, and trigger level.

### Min max envelope

### 40ns glitch detect

Sweep speeds 1 µs per division or slower on INPUT A.

### Grey-scale display

Analog-like grey-scale display.

#### Waveform average

Smoothing up to 256 waveforms. 10 samples in roll mode.

#### Vertical

Frequency Response, -3 o	dBDC to > 100MHz
	(Fluke 99B , 105B)
DC t	o >60 MHz (Fluke 92B, 96B)
ac coupled<10 Hz d	irect, <1 Hz with 10:1 probe
Coupling	AC, DC, Ground
	<3,5ns (Fluke 99B, 105B)
	<7ns (Fluke 92B, 96B)
Sensitivity	1mV to 100V/div
	to 1kV/div with 10:1 probe
Current probe scaling	lmA/div to 100,000 A/div
ModesA,	-A, B -B, A+B, A-B, A=x B=y
Input Impedance	l M $\Omega$ //25 pF direct,
10	$M\Omega//15$ pF with 10:1 probe
Vertical resolution	8 bit (256 levels)
Accuracy	±(2% +1 pixel),
	add 3% for 1 and 2 mV/div

### Horizontal

Modes\_\_\_\_\_Recurrent, Single Shot, Roll

#### Ranges

Recurrent 5ns to 1s/div (Fluke	
10ns to 1s/div (Fluk	
Dual input alternating 5ns (10ns)	to 20 µs/div
Dual input chopped 50	µs to 1s/div
Maximum Sampling rate 5GS/s (Fluke	99B, 105B)
2.5GS/s (Fluk	e 92B, 96B)
Single shot100	ns to 1s/div
Dual input alternating100ns	to 20µs/div
Dual input chopped50	µs to 1s/div
Roll2	2s to 60s/div
Dual input chopped2	s to 60s/div
Accuracy+(0.	1% + pixel)
Record length256 or 5	12 samples
(10 or	20 division)
ScopeRecord™ (Fluke 99B, 105B3	0k samples
from 20ms/di	v to 60s/div

### Trigger (normal mode)

Sources	A, B or EXTernal
Sensitivity: A or B	<0.8 div to 10MHz
	<1.5div to 60MHz
	<4.0div to 100 MHz
Sensitivity: EXTernal	+0.2V or 2.0V
	(TTL level compatible)
External input impedance_	lMΩ/25pF direct,
1	0M $\Omega$ /15pF with 10:1 probe
Delay time	20 to +640 div

N-cycle trigger	Retriggers after 2 to 255	Accu
	trigger cycles	Full S
Delay by eventsl	to 1023 events after EXT trigger	Norm
		Com
TV Trigger (on INPU	T A only)	

TV Trigger modes	Lines, Frame, Odd/Even fields,
	Line Number, 4-Field Sequence
Video Modes	Positive and Negative Video
TV Systems	NTSC, PAL, PAL-M,
	SECAM, Non-Interlaced
Scan Rates4 to	21kHz, 19 to 33kHz (non-interlaced),
	31 to 65kHz (non-interlaced)
TV Trigger Sensitivity_	1.5 division (with a minimum of
	30 mV) to 21 divisions peak-peak

#### Cursor Measurements (96B, 99B & 105B)

Up to five displayed simultaneously. All voltage measurements can be ampere measurements with optional Current Probes.

Single cursor measurements: V1, V2, t1 from TRIG, t2 from TRIG.

Dual cursor measurements:

Hz, Vrms, VDC (mean), Vpeak/peak, V max peak, V min peak, rise time, phase, dV, dt, and 1/dt.

Measurement readout: absolute, relative (zero), or % change.

Markers selectable on:

Hz, Vpeak/peak, V max peak, V min peak, rise time, and phase.

#### Waveform mathematics (99B & 105B)

Add, Subtract, Multiply, Invert, Filter, or Integrate input waveforms.

Calculate instantaneous or mean (real) electrical watts with optional Current Probes.

#### Zoom

Magnifies waveform around the fourth division at the next acquisition (sweep).

#### Meter Mode

Displays of up to four readings and a full screen scope waveform of INPUT A

#### dc Voltage

Ranges \_\_\_\_100mV, 300 mV, 1V, 3V, 10V, 30V, direct input\_ 100V, 300V with 10:1 probe \_1V, 3V, 10V, 30V, 100V, 300V, 1kV, 3 kV (limit 600V)

Accuracy	<u>+(0.5% +5 counts)</u>
Full Scale Reading	1000 or 3000 counts
Normal Mode Rejection	>50 dB at 50 or 60 Hz
Common Mode Rejection_	>100 dB at dc, 50, 60,
	or 400Hz

#### ac or ac+dc True RMS Voltage

Rang	es

direct input100mV, 300n	nV, 1V, 3V, 10V, 30V,
	100V, 250V
with 10:1 probe1V, 3V, 10V	r, 30V, 100V, 300V, 1 kV
	2.5 kV (limit 600V)
Accuracy(valid from 5% range)	
50Hz to 60Hz	±(1% +10 counts)
1Hz [20 Hz] to 20kHz	±(2% +15 counts)
1 Hz [5Hz] to 1MHz	±(3% +20 counts)
1 Hz [5Hz] to 5 MHz	_ ±(10%+25 counts)
Notes:	

of

- 1. [values] for "Vrms ac (no dc)", ac coupled input.
- 2. In "ac+dc", the dc component is included in the measurement result and does not influence the accuracy.

Full Scale Reading\_\_\_\_ 1000 or 3000 counts Crest Factor\_\_\_Automatic ranging on crest factor overload Common Mode Rejection Ratio\_\_\_\_\_ >60 dB, dc to 60 Hz

#### Additional Meter Mode Measurements

Frequency	lHz to 5MHz
Resolution	4 digits
Accuracy	±(0.5% +2 counts)

RPM	_selectable: 1 pulse/rev. or 1 pulse/2 rev.
Range	_60RPM (120 @ 1 pulse/2 rev.) to 99.99kRPM
Resolution_	1RPM (10RPM for RPM > 10,000)
Accuracy	±(1% +10 counts)

DUTY CYCLE	positive or negative pulse
Range	2.0% to 98.0%
Resolution	0.1%
Accuracy (logic or pulse wave	eforms) $\pm (0.5\% + 2 \text{ counts})$

PULSE WIDTH	positive or negative pulse
Range	250µs to 50ms
Resolutions	3 digits
Accuracy	±(0.5% +2 counts)
dBV	l volt
reference	
dBm	reference @ 50, 60, 75, 93, 110, 125,
	135, 150, 250, 300, 500, 600, 800,
	900, 1000 or 1200 $\Omega$
dBW or WATTS	1, 2, 4, 8, 16 or 50 <b>Ω</b> reference

### $\boldsymbol{\Omega} \textbf{Mode}$

(external 4-mm banana jack inputs)

Ranges_30 $\Omega$ , 300 $\Omega$ , 3k $\Omega$ ,	30k $\Omega$ , 300k $\Omega$ , 3M $\Omega$ , 30M $\Omega$
Accuracy (300 $\Omega$ to 30M $\Omega$ )	<u>±(0.5%</u> +5 counts)
Accuracy (30 <b>Ω</b> )	±(2.5% +25 counts)
Full Scale Reading	3000 counts
Measurement Current	500µA, 500µA, 70µA,
	7µA, 700nA, 70nA, 70nA
Open Circuit Voltage	_<4V
Full Scale Voltage<250	mV to 3M $\Omega$ , <2V to 30M $\Omega$
Community Beeper	audible for readings
	5% of selected range

### **Diode Test Mode**

(external 4mm banana jack inputs)

Open Circuit Voltage	_≤4V
Full Scale Voltage	2.800V
Measurement Current	0.5mA
Continuity Beeper	_audible for readings <1V

### External MV Mode

Displays up to four readings and a full size waveform of the 4mm banana jack input.

### dc Voltage

Ranges	300 mV, 3V
Accuracy	±(0.5% +5 counts)
Full Scale Reading	3000 counts
Normal Mode Rejection	>50dB at 50 or 60Hz
Common Mode Rejection	100dB at DC, 50, 60
	or 400Hz

#### ac or ac+dc True RMS Voltage

Ranges	300mV, 3V	
Accuracy	DC, 50Hz, and 60Hz.	
(valid from >5% of range)	±(2% +15 counts)	
OL at >	2500 counts in 3V range	
Full Scale Reading	3000 counts	
Crest FactorAutomatic ranging on crest factor overload		
Useful Bandwidth	5kHz	
Common Mode Rejection Ratio	>60dB, DC to 60Hz	

#### Additional EXTernal mV mode measurements

Frequency, RPM, Duty Cycle and Pulse Width measurements and waveforms can also be made with reduced accuracy.

°C/°F TEMPERATURE SCALING_	for optional
	temperature probes
Scaling	lmV/degree

AMPERE SCALING\_\_\_\_\_for optional current probes Scaling\_\_\_\_\_1mV/A, 10mV/A, 100mV/A, 1V/A (1mV/mA) for dc, ac rms, or ac+dc rms

#### Meter, $\boldsymbol{\Omega},$ Diode, and External mV Mode Functions

SmoothM	oving average of readings for about last 8sec.
Normal	<3.5sec. response time for inputs >50Hz
Fast	<lsec. for="" inputs="" response="" time="">50Hz</lsec.>
Change alert <sup>+</sup>	MAudible beep when reading changes
Touch hold	_Audible beep and hold of last stable reading
Relative	_Zeros present reading as a reference value
% change	% change relative to a reference value
% scale	% of user set 0% and 100% references
Min Max	_Simultaneous display of present, maximum,
	minimum, and average values with time

#### Min Max trendplot<sup>TM</sup>

Logs minimum, maximum, and average readings to memory at full accuracy and displays all three as graphs. Uses automatic vertical scaling and horizontal time compression for hands-free recording from 120sec. to 40 days full screen.

Minimum, maximum, and average full accuracy (16 bit) waveforms available to PC interface, (99B, 105B).

#### Memories (save or recall) (96B, 99B and 105B)

Screen_	all displayed waveforms, readings, and
	setup, 10 for fluke and 105B, 5 for Fluke 96B
Wavefor	msindividual waveforms with setting,
	20 for fluke 99B and 105B, 10 for Fluke 96B
Setups_	complete test tool setting,
	40 for Fluke 99B and 105B, 20 for Fluke 96B

#### Signal generator (99B and 105B)

Sine wave	lV pk-pk at 976Hz
Source resistance	_400 <b>Ω</b>
Square wave5V pk-pk at	488Hz, 976Hz, or 1.95kHz
Source resistance	400 <b>Ω</b>

### Probe calibrator

ac probe adjust at 5pk-pk at 1.95kHz

#### Component tester (99B and 105B)

Current mode	0 to +3mA in max. 128 steps
Max. voltage	≤2V
Voltage mode	2V to +2V in max. 128 steps
Max. current	+or -1mA

#### **General specifications**

The accuracy of all measurements is within +(% of reading + number of counts) from 18°C to 28°C. Add 0.1 x (specific accuracy) for each °C <18°C or >28°C.

#### Display

Foil compensated super twisted liquid crystal		
Size	84 x 84mm (4.7'' diagonal)	
Resolution	240 x 240 pixels,	
	25 pixels/div. in SCOPE mode	

Contrast	user adjustable
Backlight	Cold cathode fluorescent (CCFL) tube
High brightness	50cd/m <sup>2</sup>
Power	
Internal battery pack nominal	NiCd 4.8V
Operating time	Typical 4 hours
Power adaptor/batter	ry charger
Charging time	Typical 21 hours
Alternate battery	4 alkaline C cells
	(non-recgargeable)
External supply	8 to 20Vdc, 5W typical via 5mm jack

#### WARNING: The minus voltage is connected to common. When using a power supply that is not double insulated, connect common to protective grounding.

Memory back-up battery (96B, 99B and 105B) CR2032 save screens, waveforms and setups for up to three years after main batteries removed.

#### Mechanical

Size excluding holster	60 x 130 x 260mm
	(2.4 x 5.1 x 10.2inches)
Size including holster	65 x 140 x 275mm
	(2.5 x 5.5 x 10.8inches)
Weight excluding holster	1.5kg (3.3lbs)
Weight including holster	l.8kg (4.0lbs)

#### Environmental

Temperature	
Operating	0°C to 50°C
Storage	20°C to 70°C

#### Humidity

Operating\_\_\_20°C to 30°C, 90% RH non-condensing 30°C to 50°C, 70% RH non-condensing Storage\_\_\_\_\_95% RH

#### Altitude

Operating	3km (10,000ft)
Storage	12km (40,000ft)

Shock and Vibration\_\_\_\_per MIL-T-28800 for Class 3 Electromagnetic interference \_\_\_\_per MIL STD 461

# Ordering information

Description	RS stock no.
Fluke ScopeMeter 92B	214-5098
+ NAMAS CAL	214-5313
+ Spoint CAL	214-5329
Fluke ScopeMeter 96B	214-5105
+ NAMAS CAL	214-5335
+ Spoint CAL	214-5341
Fluke ScopeMeter 99B	214-5111
+ NAMAS CAL	214-5357
+ Spoint CAL	214-5363
Fluke ScopeMeter 105B	214-5127
+ NAMAS CAL	214-5379
+ Spoint CAL	214-5385

#### Accessories for the Fluke ScopeMeter Series IIB

Description	RS stock no.
FlukeView software	438-253
RS-232 serial interface link	205-738
Soft carrying case	205-744
Hard carrying case	205-750
Oscilloscope probe set	205-766

<sup>®</sup>All trademarks acknowledged

# **Glossary of terms**

#### ac

See "Alternating Current".

#### ac coupling

A mode of signal transmission that passes the dynamic ac signal component to the instrument input but blocks the dc component. This is useful to observe an ac signal that is riding on a dc level.

#### Alternating current

An electric signal in which current and voltage vary in a repeating pattern over time.

#### Adjustable speed motor drive (ASD)

An electronic apparatus for speed control of ac motors. An ASD controls the motor speed by converting the frequency and voltage of the main power supply from fixed to variable values.

The main advantages are energy savings; process improvement by allowing more control of material rates in production lines, and reduction of wear on machinery by reducing the stops and start required by fixed speed motors.

#### Amp, Ampere (A)

The unit of electric current in the mks system of units.

#### Average responding meter

A meter that assumes that the ac waveform being measured is a sinewave, senses the average value of the rectified sinewave and then displays the equivalent rms value of the sinewave. This technique can give incorrect readings if the current waveform is not a sinewave (e.g. it is a sinewave distorted due to harmonics).

#### Ballast (lighting)

A circuit element that provides a starting voltage for certain types of lamps, such as fluorescent lamps. Also used to describe circuit elements that limit an electric current.

#### Continuous autoset

A feature in ScopeMeter Series II which continuously adjusts the Scope timebase, amplitude and trigger to track input signal changes. Similar to Auto Ranging but more.

#### Current probe (or current clamp)

An instrument or instrument accessory that is used to measure the magnitude of electric current. A current probe allows current measurement to be made without breaking the electrical circuit on which the measurement is taken.

#### Current waveform

A pictorial representation of current amplitudeobtained by plotting the amplitude of the current as a function of time.

#### dc

Direct current. Electric current that flows in one direction only, as opposed to alternating current. Although dc literally applies to current, it is also used when referring to voltage as in "dc Volts".

#### **Derating (Transformer)**

The reduction of the rating of a transformer to improve reliability or to permit safe operation in the presence of current harmonics, inadequate ventilation or high ambient temperature.

#### DMM

Digital multimeter, capable of measuring several electrical parameters such as voltage, current, frequency, resistance etc.

#### Double insulation

Insulation that is usually constructed in two parts. Having the basic insulation required to isolate live parts, providing protection against electric shock and fire. It also has independent insulation, providing protection in the event of failure of the basic insulation. This is indicated on the instrument by the double insulation symbol, which is a "square surrounded by a square".

Double insulation is also applied to a single layer of insulation that has been tested to withstand a high voltage (reinforced insulation).

#### Effective current

The value of an accurrent that will give the same heating effect as the corresponding value of dc current. Also known as the rms current.

#### Float voltage

The difference in potential between the measurement common conductor of an instrument or accessory and earth potential.

#### Frequency

The number of cycles completed by a periodic quantity in a unit of time. The measurement unit for frequency is the Hertz (Hz). For example, current in a power distribution system completes 60 cycles in a second (60 Hertz).

#### **Fundamental frequency**

The lowest frequency of voltage or current in the power system (usually 50Hz or 60Hz depending on locale).

#### Glitch detect

The ability of a test instrument to capture fast transients of volt transitions. ScopeMeter test tools can capture glitches as fast as 40ns.

#### Harmonic

A whole number multiple of the fundamental frequency. Harmonics are named by harmonic number, ie. fundamental = 60Hz, 2nd harmonic = 120Hz, 3rd harmonic = 180Hz, etc.

#### Harmonic distortion

Distortion in which undesired harmonics of the 50 or 60Hz powerline fundamental are present because of nonlinear loads.

#### Insertion impedance

The increase in impedance that occurs when a current clamp is clamped around a conductor. Even though a current clamp does not physically break the circuit being measured, it does in fact affect the current slightly. This is expressed as an impedance in the circuit, called the insertion impedance.

#### Load

A device that consumes electric power, or the amount of electric power that is drawn from a power line, generator or other power source.

#### Load imbalance

In a multi-phase power distribution system, the condition in which the sum of the phase currents do not add up to zero.

#### Neutral conductor

The grounded conductor in a power system. The neutral carries imbalance and/or 'triplen' harmonic currents.

#### Non-linear load

A load that does not draw a sinewave current from a sinewave voltage. These loads typically contain arcing devices or semiconductors that switch the current off and on abruptly. These abrupt changes result in harmonics in the current carrying conductors.

#### Peak (half cycle)

The maximum value of a repetitive waveform on each half cycle. This is typically greater than the rms value of the waveform. This assumes that high frequency nose is filtered out of the waveform being measured.

#### Peak (instantaneous)

The maximum value of a waveform (determined within the bandwidth limitation of the measurement system). This type of peak is measured using an instrument that responds to high frequency inputs and the measured value will be greater than or equal to the value obtained for the half cycle peak. Compare with Peak (half cycle).

#### Peak (motor starting)

The rms value of the current drawn by a motor at startup. The current at start-up is initially high to overcome the inertia of a motor that is not turning.

#### Phase shift

The displacement in time of one periodic waveform relative to another waveform. In a measurement system, it is the displacement (measured in degrees) between the input (e.g. current being measured) and the output, (e.g. waveform display on an oscilloscope).

#### Rated voltage

The maximum circuit voltage that an instrument is designed to be used on. Use of an instrument in circuits where higher voltage is present is considered misuse.

#### **Reinforced insulation**

A single insulation system applied to live parts that gives the equivalent protection of double insulation. This protection may be due to increased thickness of a single layer of insulation or may include several layers.

#### Rise (or fall) time

If a steady-state increment (of current) is applied to the input (of a current probe), the time it takes for the output of a device to change from 10% to 90% of its steady-state increment.

#### RMS current (Root-Mean-Square current)

The value of an ac current that will give the same heating effect (in a resistive load) as the corresponding value of dc current. Also known as the effective current.

#### Temperature coefficient

The rate of change of some parameter (such as the current probe accuracy) with respect to temperature. Also called the 'influence of temperature'.

#### Transformer

An electrical component consisting of two (or more) coils of wire placed in close proximity to cause the magnetic field of one to link the other. Used in power distribution systems to step down (or step up) the voltage from one section of the system to another. Also, the jaws and output of a current clamp are a kind of transformer in which one 'coil' is the conductor whose current is being measured and the other coil is wound in the jaws of the clamp.

#### TrendPlot

A unique ScopeMeter function allowing a low speed signal to be plotted, like a chart recorder, for up to 40 days. All the data is kept on the display and can be time correlated.

#### Trigger

An input level (on an oscilloscope) that is used to initiate the display or capture of a waveform.

#### Trigger, free run

An automatic trigger function in oscilloscopes which causes a trace to appear on the screen even without an input signal.

#### Trigger, single

An oscilloscope trigger setting which causes the signal to start the scope trace and then freezes the trace on screen. Commonly referred to as single shot.

#### Triplens

A family of harmonics that includes the 3rd and odd multiples of the 3rd (9th, 15th, 21st, etc). The triplens are "zero sequence" which means that they add in the neutral of a 3-phase, 4-wire system causing neutrals and transformers to overheat.

#### Uninterruptible power supply (UPS)

A power supply which supplies power regardless of the state of the power mains. Used to ensure that critical equipment operates during power outages or brownouts.

#### Usable frequency range

Used here as the range of frequencies in which the output varies no more than 3dB (approximately 30%) from the input. It is used to characterise the frequency response of an instrument.

<sup>®</sup>Fluke ScopeMeter and FlukeView are registered Trade Names of Fluke Corporation USA.

The information provided in **RS** technical literature is believed to be accurate and reliable; however, RS Components assumes no responsibility for inaccuracies or omissions, or for the use of this information, and all use of such information shall be entirely at the user's own risk. No responsibility is assumed by RS Components for any infringements of patents or other rights of third parties which may result from its use. Specifications shown in RS Components technical literature are subject to change without notice.