

Sadelco DisplayMax Operator's Manual

This document contains information proprietary to Sadelco, Inc. The information in this document is not to be used or duplicated in any manner without prior written consent from Sadelco.

DisplayMax Manual Part No. ST1008

Rev. 08-31-2001

Copyright 1999, 2000, 2001 Sadelco, Inc. Patent Pending

DisplayMax 600	47 – 600 MHz	Scanning Signal Level Meter
DisplayMax 600 CLI	47 – 600 MHz	Scanning Signal Level Meter and Calibrated Leakage Detector
DisplayMax 800	5 – 872 MHz	Scanning Signal Level Meter With Sub Band and Ingress Sweep
DisplayMax 800CLI	5 – 872 MHz	Scanning Signal Level Meter and Calibrated Leakage Detector With Sub Band and Ingress Sweep

Warranty

Sadelco warrants all instruments against defects in material and workmanship for a period of twelve months after shipment. Sadelco will repair or replace any assembly or component (except batteries) found to be defective under normal use during this period. Sadelco's obligation under this warranty is limited solely to repairing any instrument which, in Sadelco's opinion, proves to be defective within the scope of the warranty when returned to the factory. Transportation to the factory is to be prepaid by the purchaser. Return transportation via UPS surface will be provided by Sadelco. Should the customer request an alternate shipping method, the customer will be solely responsible for any charges in excess of UPS surface rates.

This warranty does not apply to any products repaired or altered by any persons not authorized by Sadelco, or not in accordance with instructions furnished by Sadelco. If the instrument is defective as a result of misuse, improper repair, or abnormal conditions of operation, the warranty will become void. In doubtful cases, we will contact the purchaser for non-warranty repair authorization. Please notify us if an estimate is required.

Sadelco assumes no responsibility for its products being used in a hazardous manner either alone or in conjunction with other equipment. Sadelco assumes no liability for secondary damages and, in any event, Sadelco's liability for breach of warranty under any contract or otherwise shall not exceed the purchase price of the specific product shipped and against which a claim is made.


An RMA number is not required to return either warranty or repair units to Sadelco. However, Sadelco assumes no liability for any product in transit to Sadelco. Please make sure to include a description of the problem or symptom along with your complete company name, address, telephone, fax, and contact person.

For Warranty or Repair Service return to:
Sadelco, Inc., 75 West Forest Ave. Englewood, NJ 07631 USA
Tel: 800-569-6299 (USA Only) Tel: 201-569-3323 Fax: 201-569-6285
e-mail: sadelco@aol.com Website: www.sadelco.com

Table of Contents

Keypad Control Diagram	3
Initial Startup	4
Customizing Your Meter	4
Setup Menu	6
Cloning	10
Meter Operation.....	11
Battery	11
Lights	12
Display Contrast	12
Speaker	12
Automatic Calibration	12
Signal Level Measurement	13
General	13
Single Channel Tuning	14
Tuning by Frequency	14
Full Scan Tuning	14
Zoom	14
Favorite Channel Tuning	14
Tilt	15
Sub Band (800 versions only)	15
Checking Levels Against Limits	15
Digital Channel Measurement	16
Data Recording, Printing and Downloading.....	17
Storage Capacity.....	17
Saving Measurements	17
Recalling and Deleting Files	17
Creating Excel Spreadsheets.....	17
Download to Windows 3.11 Terminal.....	18
Download to Windows 95/98 HyperTerminal	19
Print Direct to Serial Printer	19
24 Hour Testing	20
Hum	21
Carrier to Noise	22
Ingress Sweep (800 versions only)	22
Leakage Detector (CLI versions only)	23
Appendix A: Specifications	28
Appendix B: Accessories	29
Appendix C: Cable Wiring Diagrams	30
Appendix D: Trouble Shooting Guide	31

DisplayMax Keypad Controls

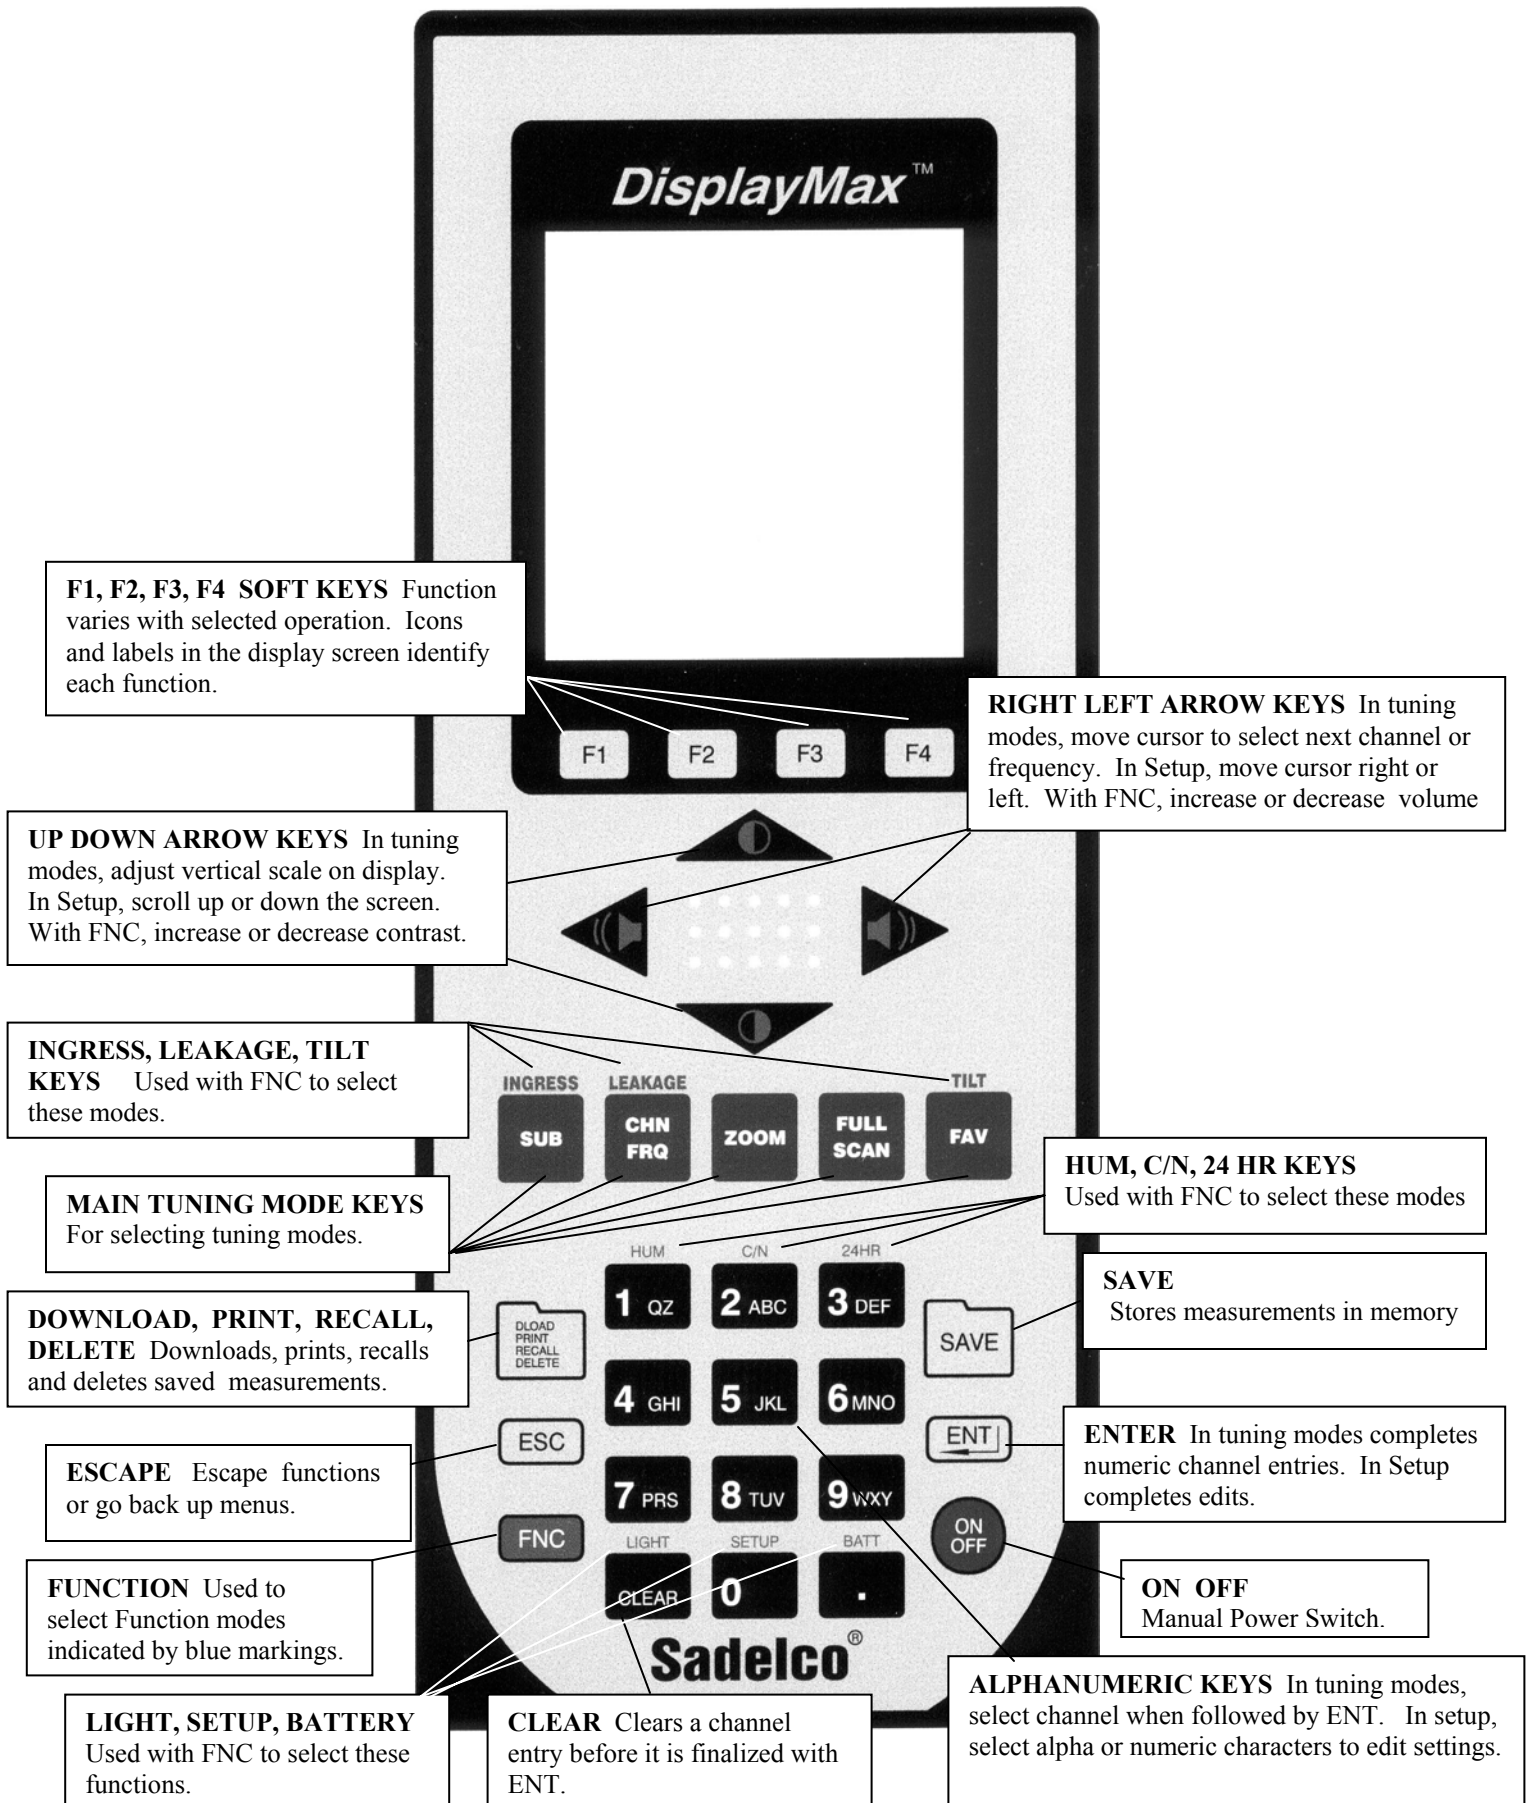

Initial Startup

1. **Connect the AC/DC charger.** Right side of unit
2. **Turn your meter on.** Press ON/OFF
3. **Turn on the backlight if necessary.** Press FNC, LIGHT
4. **Adjust display contrast if necessary.** Press FNC, UP/DOWN ARROW
5. **Connect an RF signal source.** Input F connector is located on the top of the meter.
6. **Press the red FULL SCAN key.** Your DisplayMax will now tune, measure, and display all channels in the selected channel plan.
7. **Use ← → to scroll through channels.** You can also tune channels by entering the Channel Number, then ENT.

Customizing Your DisplayMax

Factory default settings allow you to begin using your DisplayMax immediately. However, we recommend that you verify that the following user definable options match your requirements.

1. **Make sure you are in the correct channel plan. The Channel Plan name is located in the lower left corner of the display. The factory default is EIA (NCTA). See Setup Menu Section 1.1**
2. **Make sure to select digital channels and delete unused channels. See Setup Menu Section 1.2**
3. **Make sure the correct measurement units have been selected. Measurement units appear on the right side of the display, just above the Video Level. The factory default is dBmV. See Setup Menu Section 2.7**

Generic Keypad Controls for SETUP

The easiest way to learn how to customize your meter is by actually doing it. The following keypad controls work the same way in all SETUP menus.

FNC, SETUP	To access main SETUP menu.
UP/ DOWN ARROWS	To scroll to a desired line item. To scroll through options in some edit boxes.
ENT	To select a highlighted line item for editing. To finalize an edit.
RIGHT/LEFT ARROWS	To move the edit cursor when doing alphanumeric edits.

ALPHANUMERIC KEYS

To change the character indicated by the edit cursor: press once to select the number, press again to scroll through alpha choices, e.g. For the number 2, press the “2” Key once, for A - press it twice, for B - press it 3 times, for C - press it 4 times. Use the Right/Left arrow to move the cursor to the next position. When finished, Press ENT.

+/-

To change the sign of a number.

F1, F2, F3, F4

As indicated in display.

ESC

To escape up one menu level.
To exit the SETUP mode.

Basic Method For Editing in Setup

1. Press FNC, Setup to access the Main Setup Menu.
2. Use UP/Down Arrows to highlight the desired Setup Section.
3. Press ENT to select this section.
4. Use UP/Down Arrows to highlight the desired line item within each Setup Section.
5. Press ENT to select the line item for editing.
6. When a line item has been selected, it appears in the Edit Box at the bottom of the screen.
7. Use UP/Down Arrows or Alphanumeric Keys to edit the line item.
8. Use Right/Left Arrows to move the edit cursor position.
9. Press ENT to complete each line item edit.
10. After a line item is edited, the new value appears on the proper line and the edit box is blank.
11. Use UP/Down to select another line item or ESC to exit.
12. To erase an alphanumeric character, press the Zero Key twice until a blank appears.

Select sub-menus using ↑↓, then ENT

Items being edited appear in this box

```

=====
- SETUP -
=====
MAIN MENU
=====
USE [UP] [DOWN] [ENT] TO SELECT
=====
1 CHANNEL PLANS
2 METER OPERATION
3 EDIT CHECK LIMITS
4 INGRESS
5 COMMUNICATIONS
6 OWNER IDENTIFICATION
7 24 HR FCC TEST
8 METER INFORMATION
9 LEAKAGE
10 RESET FACTORY DEFAULTS
=====
USE [ESC] TO GO UP MENU
=====
[ ] [ ] [ ] [ ]

```

Setup Menu

The following section lists all settings that can be customized by the user. Keypad controls for selection and editing are similar for all Setup Menu Sections. Detailed keypad instructions have been included for a few of the more complicated sections.

1.0 Channel Plans

1.1 Selecting A Different Channel Plan

DisplayMax comes preprogrammed with several standard channel plans. NTSC, HRC, IRC, AIR, and PAL. Additional standard and custom plans are available from the factory. The factory default plan is EIA (NTSC).

To Select a different plan:

Press FNC, SETUP

CHANNEL PLANS is the first menu item and will already be highlighted.

Press ENT to select.

SELECT A CHANNEL PLAN is the first menu item and will already be highlighted.

Press ENT to select.

Use UP/DOWN Arrow Keys to scroll to and highlight a different channel plan if desired.

Press ENT to select.

Press ESC to exit sub-menu.

Press ESC to exit SETUP

1.2 Edit the Current Channel Plan

DisplayMax allows separate editing of each plan. Multiple copies of the most common plan, EIA, have been included for users who operate in multiple systems with different sets of channels.

- SETUP -

EDIT CURRENT PLAN NCTA

USE **✓** **✗** **ENT** TO SELECT

CH	NAME	FAV	TLT	D	VID	FREQ
✓ 2	CBS	F1	LO			55.250
✓ 3						61.250
✓ 4		F2				67.250
✓ 5						73.250
✓ 6						79.220
✗ 95						85.250
✗ 96						91.250
✓ 97				D		97.250
✓ 7						103.250

USE **ESC** TO GO UP MENU

NAME

DEL **MARK** **MARK** **END**
✗ **FAV** **DIG** **PLAN**

X indicates deleted channel

Indicates LO tilt channel

Indicates digital channel

Press ENT to enter or edit name

Press F1 to delete unused channels

Press F2 to mark favorite channels (Fav 1 is automatically LO Tilt Channel)

Press F3 to mark a digital channel

Press F4 to delete all subsequent channels and end the plan

To Edit a Channel Plan:

Press FNC, SETUP

CHANNEL PLANS is the first menu item and will already be highlighted.

Press ENT to select.

Arrow down to EDIT CURRENT PLAN

Press ENT to select

The first channel in the plan is highlighted. It can be edited as follows:

F1 To delete the channel

F2 To mark it as one of 9 Favorite channels

Fav 1 is automatically designated as the Lo Tilt Channel

The highest marked Fav is automatically designated as the HI Tilt Channel

F3 To mark it as a digital channel

Repeat as required for each channel,

Scroll down through all desired channels, then:

F4 Marks the highlighted channel as last active channel in the plan and deletes all subsequent channels.

Press ESC to back out of each menu level. (press ESC three times to return to measurement mode)

Adding Channel Names

You may also enter a four-character name for each channel when it is highlighted. Press ENT, then use the alphanumeric keys. The name will appear in the edit box. To enter the letter A, press the Number 2 Key twice. Then Arrow Right for the next character.

When finished, Press ENT to finalize the edit.

1.3 Restore The Current Channel Plan

This function lets you quickly restore the full, unedited channel plan that has been selected. All user edits to the plan will be deleted.

Press FNC, SETUP

CHANNEL PLANS is the first menu item and will already be highlighted.

Press ENT to select.

Arrow down to RESTORE CURRENT PLAN

Press ENT to select

Press ESC to abort or

Press ENT to restore the channel plan to its original form.

2.0 Meter Operation

2.1 Current Time

Time is always displayed in 24-hour military fashion.

HH:MM:SS

2.2 Current Date:

Date is always displayed as Month, Day, Year

MM/DD/YY

2.3 Power Auto Off

Automatic meter shutoff after last keypad entry extends battery life.

5 Minutes (factory default)

10 Minutes

Never (stays on until manual shutoff)

2.4 Lite Auto Off

Automatic light shutoff after last keypad entry extends battery life.

1 Minute (factory default)

2 Minutes

Never (light stays on until manually shut off or meter is turned off)

2.5 Brightness

LCD backlight brightness adjustment - use Low for maximum battery life.

High

Low

Medium (factory default)

2.6 Beep

Turn Keypad entry Beep On or Off

ON (factory default)

OFF

2.7 Measurement Units

Switch between dBmV and dBuV.

dBmV dB millivolts (factory default)

dBuV dB microvolts

Note: Switching measurement units will automatically change all display screens and channel checking limits. The only function not effected is Leakage Detection which has independent, user selectable measurement units.

2.8 Analog Cal Offset

Caution: DisplayMax is a precision instrument with automatic self-calibration using a built-in white noise reference. This offset allows the user to adjust the gain or loss of all analog channels by the same amount to match another instrument or external reference. Before making any adjustments, keep in mind that discrepancies of +/- 2.0 dB between the readings of two signal level meters are possible and within manufacturers' specifications (each meter being +/-1.0 dB).

2.9 Digital Channel Offset

Caution: DisplayMax is a precision instrument with automatic self-calibration using a built-in white noise reference. This offset allows the user to adjust the gain or loss of all digital channels (single channel or scanning mode) by the same amount to match another instrument or external reference. Before making any adjustments, keep in mind that discrepancies of +/- 2.0 dB between the readings of two signal level meters are common and within manufacturers' specifications (each meter being +/-1.0 dB).

2.10 Digital Bandwidth Adjustment

Factory default is set for 6 MHz digital channel bandwidth. User can alternately select 8 MHz .

2.11 Digital Scan Offset

This offset is applied only to digital channels when being measured in a scan mode (Sub, Zoom, Full Scan, Fav). This offset may be required when measuring non-QAM signals in the scan mode. See Digital Channel Measurement.

3.0 Edit Check Limits

Four sets of check limits for analog channels have been factory preset.

These limits can all be edited by the user.

The factory defaults are:

ANALOG CHANNELS	DROP	GBLK	TAP	USER
Minimum Video Level	00.0	03.0	03.0	00.0
Maximum Video Level	15.0	18.0	18.0	15.0
Maximum Delta Video Level	10.0	10.0	10.0	10.0
Minimum Delta Video-Audio	10.0	10.0	10.0	10.0
Maximum Delta Video-Audio	17.0	17.0	17.0	17.0
Maximum Adjacent Channel	03.0	03.0	03.0	03.0

DIGITAL CHANNELS	DROP	GBLK	TAP	USER
Minimum Digital Average Power	-8.0	-5.0	-5.0	-8.0
Maximum Digital Average Power	07.0	10.0	10.0	07.0
Maximum Adjacent Channel	03.0	03.0	03.0	03.0
Minimum Delta Digital Level	10.0	10.0	10.0	10.0

4.0 Ingress

Reference Level Line: Range -35 to + 60 dBmV

Reference Level Line Factory Default is -20 dBmV

Sweep Range 5.125 MHz to 40.0 MHz

Factory default is full sweep range. Range can be narrowed for faster sweep period of small bandwidth.

5.0 Communications

5.1 Baud Rate

Select 19200, 9600, 4800, 2400, 1200

Factory default is 9600

5.2 Clone

Sets DisplayMax in SEND, RECEIVE, or DISABLE

Factory default is DISABLE

Cloning will transfer all user customizable settings to other DisplayMax meters except the following:

Employee Name

ID Number

Clone Setting

Channel Plans must be identical in both meters for Clone to transfer channel plan edits.

6.0 Owner Identification

User can enter the following:

Company Name

Address

Telephone Number

Employee Name

Employee ID Number

7.0 24 HR Test

Change the following 24 HR Test Parameters:

Parameter	Factory Defaults	Range
24 HR Test	OFF	
Current Time	HH:MM:SS	
Current Date	MM:DD:YY	
First Scan Delay	05 MINS 00 HRS	0 - 59 MINS 0 - 4 HRS
Scan to Scan	00 MINS 06 HRS 00 DAYS	0 - 59 MINS 0 - 23 HRS 0 - 6 DAYS
Number of Scans	04 SCANS	1 - 99 SCANS (Maximum memory capacity is 43 scans)

Note: All of the above can also be edited when FNC, 24HR is selected. Parameters cannot be edited once 24 HR Test has been started.

8.0 Meter Information

This section is not user adjustable.

Model Number

Serial Number

Sadelco Address and Telephone Numbers

9.0 Leakage

Settings for optional built-in calibrated leakage detector. Available only on CLI versions.

Parameter	Factory Default	Range
Default Frequency	133.250	108 - 140 MHz
Default Mode	SEARCH	SEARCH or MEASURE
Default Distance	10 Ft.	10 Ft or 3 Meters (actual distance changed from Leakage Mode)
Level Units	uV/M	uV/M, uV, dBmV, dBuV
Antenna Select	Dipole	Duck, Dipole, Monopole
Antenna Factor	100	20 – 100 (adjusts automatically with change in antenna select)
Threshold	20 uV/M	5 - 99 uV/M
Squelch	0	0 - 20 steps
Peak Clear	Manual	5 Seconds, 30 Seconds, Off, Manual
Video Gating	OFF	ON, OFF

10.0 Reset Factory Defaults

Resets all Factory Default Settings except Channel Plan Customization.

Cloning

Cloning transfers all user customized settings from the Source meter to the Receive meter except the Employee Name, Employee ID Number, and the Clone setting.

Important – Both Source and Receive meters must contain the same channel plans for a successful clone.

Receiving meter must have a frequency range equal to or greater than the Source Meter.

Both Source and Receive meters must be set to the same measurement units (dBmV or dBuV) before cloning.

To Clone additional meters from one source:

In Setup, Communications, Baud Rate:

Set the Baud Rate of both meters to 9600

Connect Source and Receive meters with Sadelco Clone Cable P. N. CA20.

In Setup, Communications, Clone:

Set Receive meter to Receive

Press ENT

Set Source meter to Send.

Press ENT. When this last step is completed, meters are cloned.

Note: Certain software revisions may not be compatible for cloning. The meter automatically checks for compatibility before transmitting clone data. If not compatible, a warning message will display on the screen and clone will not occur.

Meter Operation

Battery Operation and Charging

The DisplayMax is powered by 6, high-energy nicad batteries. The batteries may not be fully charged when you receive your meter.

Checking the Battery Voltage

1. Disconnect the charger
2. Press FNC, BATT to display the battery screen.
3. The operating voltage is from 6.5 to 8.0 Volts.
At 6.9 Volts the Lo BATT warning screen will appear momentarily. You will have approximately 20 minutes of battery life left.

Charging the Battery

Use only the proper Sadelco Charger:

For maximum long-term battery life, allow battery to fully discharge before charging and fully charge before discharging.

The DisplayMax must be manually turned off for charging to take place. When either the AC Charger or DC Vehicle charger is connected, the automatic shut-off is disabled. The DisplayMax can run continuously using either charger but it will not charge while operating.

AC Charger	Sadelco P.N. T70 for 110 V	T70E for 220 V
DC Vehicle Charger	Sadelco P.N. CH04	

Charge Time: 2 hours for 75% of full charge.
4 hours for 100% charge.

Run Time: 4.0 hours of continuous use with the backlight off
3.5 hours with the backlight on low.
3.0 hours with the backlight on medium.
2.0 hours with the backlight on high.
Cold temperature will reduce operating time.

Battery Life: Typically 500 charge/discharge cycles, Replace only with Sadelco P.N. BAT06.

The meter can be left on charge overnight. It will automatically go to a trickle mode after it is fully charged.

Power Saving Functions

To help increase the effective battery life, there are three user adjustable features.

Power Auto Off Factory Default is 5 minutes

Light Auto Off Factory Default is 1 minute

Brightness Factory Default is Medium

See Setup Sections 2.3, 2.4, and 2.5 for detailed instructions on changing these default settings.

Battery Timer

The voltage drop of nicad batteries is non-linear and changes with the age of the battery. This makes it difficult to accurately predict remaining battery life using voltage. In addition, the power consumption for each user will vary depending on the use of lights, volume and other meter functions (2 to 4 hours of continuous use). We have included an elapsed time indicator to track the accumulated On Time between charges. By resetting it after each charge, you will be able to determine how long a charge lasts under your specific operating conditions. This will help you maximize battery usage with each charge.

To reset the elapsed time indicator:

(After fully charging the meter)

Press FNC, BATT to access the Battery Screen.

Press ENT to reset the timer.

Press ESC to exit.

Lithium Battery

A lithium coin cell, Sadelco P.N. BAT07, keeps the clock and RAM functioning even when the Nicad pack is fully discharged or disconnected for replacement. This cell should never require replacement over the life of your meter. Removal of this cell will result in loss of all user programming and setups. Long term storage of the DisplayMax with no nicad battery or a dead nicad battery will deplete the coin cell requiring replacement.

Lights

The DisplayMax has been equipped with a backlit LCD display to allow operation in all lighting conditions. Use of the backlight will significantly reduce the operating time between charges and should only be used when necessary. If no keypad entry is made, an automatic timer shuts the backlight after 1 minute. This timer can be changed to 2 minutes or completely disabled in Setup, see Sections 2.4 and 2.5. The backlight will always go off when the meter is turned off.

Additional power saving is achieved by reducing the brightness of the display.

Backlight Setting	Estimated Operating Time (with full charge)
Light Off	4 Hours of continuous use
Low	3 Hours
Medium	2.5 Hours
High	2.0 Hours

Display Contrast

The contrast of the display is sensitive to temperature. It is automatically adjusted using the internal temperature sensor. Additional adjustment may be necessary to optimize viewing. Contrast settings do not effect battery life.

To adjust the display contrast:

Press FNC, Up or Down Arrow (Pop-up instruction window will appear)

Press UP or Down as necessary

Press ESC

Audio Speaker

In the signal level modes, the audio speaker can only be used when tuning is restricted to a single channel or frequency. When audio is available, a loudspeaker icon appears, press F4 to activate.

In the leakage detection modes, audio is always available, volume can be adjusted to full off.

The waterproof, mylar speaker cone is sealed to the front panel. This allows operation in wet weather without ingress of moisture.

Single Channel Mode

To listen to the sound carrier of a channel, press F4.

Adjust volume using FNC, Left or Right Arrow. (Pop-up instruction window will appear)

When the Audio function is activated in this mode, the video level is frozen.

Single Frequency Mode

To listen to the sound at any frequency, press F4.

Adjust volume using FNC, Left or Right Arrow. (Pop-up instruction window will appear)

This also allows listening for any anomalies between channels.

Leakage Detector Mode

An audio tone varies in pitch with leakage level.

Adjust volume using FNC, Left or Right Arrow.


Automatic Calibration

The DisplayMax uses a combination of factory recorded calibration data and an on-board precision white noise reference to maintain meter calibration. Automatic calibration, occurs upon initial turn on, and at regular intervals while the meter is operating. While the auto-calibration should keep your DisplayMax within factory specifications indefinitely, we recommend an annual factory calibration check.


Signal Level Measurement

General

The main red tuning keys let you select groups of channels according to your needs.

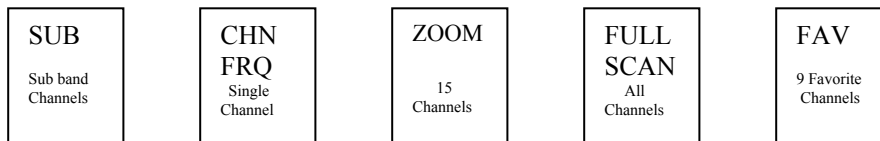

After you have selected one of these tuning modes, the DisplayMax begins measuring both the audio and video carriers of all channels in that mode. It keeps scanning and updating those channels until you select another mode.

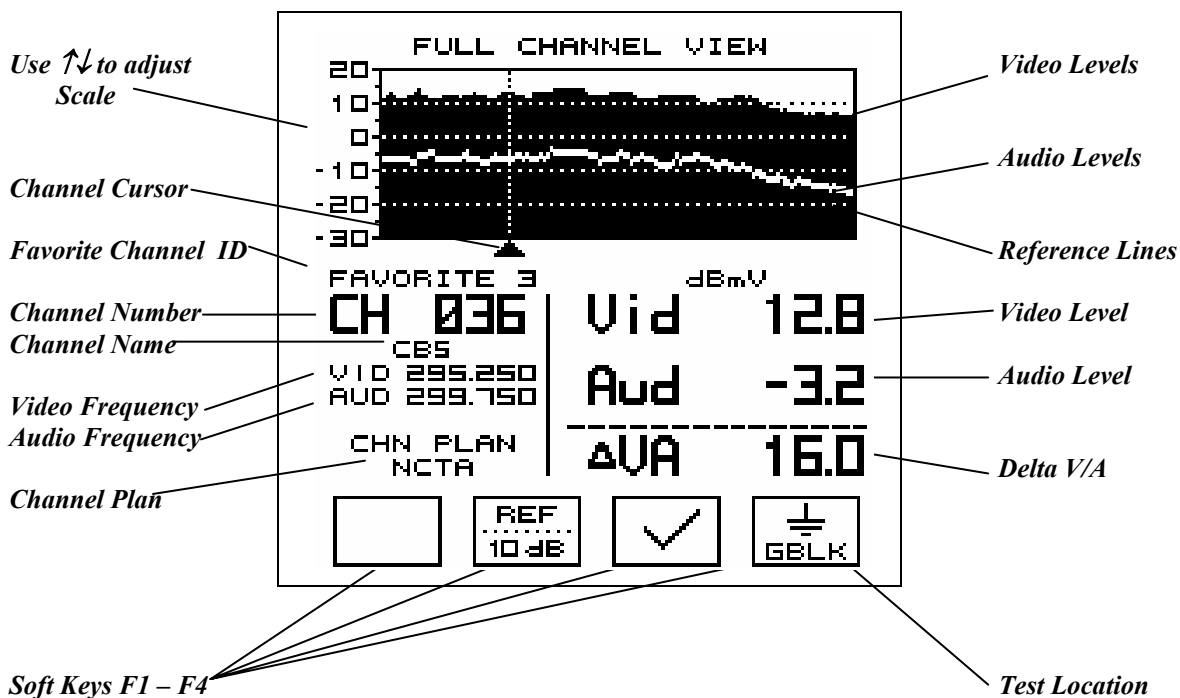

To change the cursor Channel:

Press Right or Left Arrow, or use Number followed by ENT

To change reference lines:

Press F2 to toggle between, FCC, 10 dB, and None

To change test location for check function:

Press F4 to toggle between Drop, Ground Block, Tap, and User

To check levels against limits:

Press F3 Check.

Inactive channels must be deleted in Setup for correct results. See section 1.2 for details.

To change tuning mode:

Press another red tuning mode key. The cursor will tune to the same channel in the new mode if it exists, if not, the cursor will tune to the first available channel in the new mode.

Attenuation and calibration are automatic.

Single Channel and Frequency Tuning

This mode is used to examine one channel at a time in detail. All channels, including sub band and digital channels can be examined in this mode.

Analog Channels

Video, Audio and delta VA (Video – Audio) are displayed at the same time.

Right/Left Arrows tune the next channel.

A Channel Number followed by ENT directly tunes that channel.

Press F4 to turn on the audio loudspeaker.

Press F1 to switch to Single Frequency

Digital Channels

Digital Channels must be specified in Setup, Channel Plan, Edit Current Plan.

In single channel mode, the full bandwidth is swept and displayed along with the channel's average power.

Press F1 to change from single channel mode to single frequency mode.

Press F2 to toggle 10dB reference lines on or off.

Single Frequency Tuning

From any single analog channel, Press F1

The video carrier of that channel is displayed.

A Frequency Number followed by ENT tunes that new frequency.

Right/Left Arrows increment tuning in 125 KHz steps.

Note: F1 key returns you to the Single Channel Mode only if the tuned frequency is within the boundaries of a channel.

Use the red CHN/FRQ key to return to the Single Channel Mode if the tuned frequency is not within a channel.

Full Scan Tuning

This mode is used to scan, measure, and display all of the channels in your system at once. At the end of the first scan, you can check the results against the FCC or your own limits.

Note: Sub band is displayed in its own mode and is not included in full scan.

Note: Make sure to delete unused channels in the Setup Mode to prevent incorrect Channel Fail messages when using the Check Key.

Zoom

The Zoom mode displays a close up view of 15 channels at one time. It will show seven channels on each side of the cursor channel. If the cursor is on one end of the spectrum, fewer channels will be shown. The Zoom Mode can be entered from any of the tuning modes. If the cursor channel does not exist in the Zoom Mode, such as the sub band channel T07, then Zoom will default and begin tuning with the first available channel.

Once in the Zoom Mode, Right/Left Arrows do not scroll past the 15 channels.

To change the center channel of the Zoom Mode:

Select a valid channel number, then ENT

Or use the Right/Left Arrows then press Zoom again.

Favorite Channel Mode

Displays up to nine user selected channels. These can be any channels including sub band. Each channel plan has its own set of favorite channels. The lowest and highest favorite channels are automatically used for the Tilt Function. The DisplayMax always needs at least one active favorite channel. The lowest channel in the plan is automatically designated F1. Before you can change this, you must first mark another channel as a favorite.

To select additional favorite channels, see Setup Menu, Section 1.2 Edit the Current Channel Plan.

Tilt

Displays a low and high channel and automatically calculates system tilt. The lowest and highest Favorite Channels are automatically used as the Tilt Channels. If no Favorite Channels have been selected, the lowest and highest active channels in the plan are used as defaults. Press FNC, TILT to select this mode.

To select Tilt Channels, see Setup Menu, Section 1.2 Edit the Current Channel Plan.

Sub Band Mode

Available only on 800 Series Meters.

Displays the T channels of the sub band.

Press the red Sub tuning Key to enter the sub band mode.

Once in the sub band:

A number followed by ENT tunes a sub band channel.

The Right/Left Arrows do not scroll out of the sub band.

Sub band channels can also be accessed one at a time in the Single Channel Mode. Press the Left Arrow in the Single Channel Mode to scroll below Channel 2 or the Right Arrow to scroll above the highest active channel.

C/N and Hum measurements can be made on sub band channels.

Checking Levels Against Limits

Full Scan, Favorite Channels, Sub Band, and Zoom Modes can all be automatically checked.

The signal levels of both active scans and previously recorded ones can be instantly checked against FCC or user defined limits. Four separate sets of limits (Drop, Ground Block, Tap, and User) have been factory pre-set. Each of the four sets of limits can be edited by the user. See Setup Menu Section 3.0, Edit check Limits.

The following automatic tests are performed for each active channel:

- | | |
|----------|---|
| ANALOG: | Minimum and Maximum Video level.
Minimum and Maximum Delta Video/Audio
Maximum upper and lower Adjacent Channel Level
Maximum Video Variation of all checked channels. |
| DIGITAL: | Minimum Digital Average Power.
Maximum Digital Average Power.
Maximum upper and lower Adjacent Channel Level.
Maximum Digital Power Variation of all checked channels. |

Note: To avoid false error messages, it is important to delete unused channels from the channel plan before checking. See Setup Menu Section 1.2, Edit the Current Channel Plan.

Note: Adjacent channel check function compares each channel with the previous and subsequent active channel. This can result in incorrect error messages when channels have been deleted and in the Favorite Channel Mode where channels are not usually adjacent to each other.


To Check Levels Against Limits:

When the first scan is completed, a check icon appears above the F3 softkey.

Use F4 to select the measurement location, Drop, Ground Block, Tap, or User.

Press F3 to check the signal levels against limits.

The information at the bottom of the display now shows the results of the check.

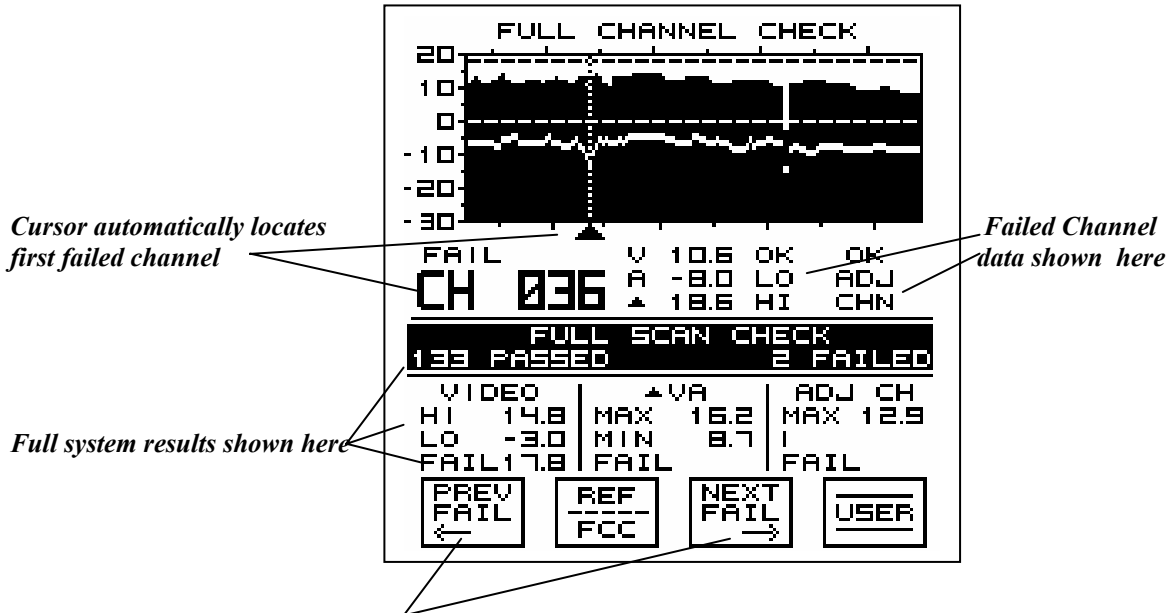

Jump to previous or next failed channels using special keys.

After checking:

Press Save if you wish to record the data.

Note: The DisplayMax saves data in its raw form, the check information is not saved. However, the saved data can be checked later in Recall, or Download.

Press F3 or F1 to move the cursor to the Next Failed Channel

Press F4 to change the check location and re-check.

Use Right/Left Arrow keys to scroll through all channels one at a time.

Press any red tuning key to resume meter operation.

Digital Channel Measurement

To measure digital channels, you must first designate them as Digital. See Setup Menu Section 1.2, Edit the Current Channel Plan. Only 6MHz digital channels that match the channel plan can be measured. For measurement of smaller bandwidth signals, such as telephony, contact Sadelco. In the single channel mode, the full bandwidth of the channel is measured and displayed along with the average power. This mode allows for the frequency response of the channel to be viewed and also allows for accurate measurement of any type of modulation (QAM, QPSK, QPR, VSB). In any scan mode (Full, Sub, Fav, Zoom), only the center of the channel is measured and displayed as a single bar. Digital channel measurements should be relatively close between the single channel mode and scanning modes. Based on the full sweep of the measured channel, the single channel mode will be inherently more accurate. To fine adjust, or correlate readings between the single channel mode and scanning modes, a digital scan offset can be applied in the meter operations menu. For standard QAM channels no offset should be required. For measurement of 8MHz digital channels (European Channel Plans) set digital channel BW to 8MHz in the meter operations menu.

Caution: Some HRC/IRC systems add new digital channels using standard EIA modulators. This may require measuring digital channels on a different plan than analog channels. Contact Sadelco for a custom channel plan.

Data Recording, Printing and Downloading

Storage Capacity

Channel Scan Modes: 43 scans – Regardless of number of channels. Modes include Sub, Zoom, Full Scan, Fav, and Tilt.

Non-Channel Scan Modes: 99 measurements – Modes include Single Channel, Leakage, C/N, Hum, and Ingress.

Saving Measurements

After completing a scan or test, Press **SAVE** to record your measurement results.

Enter an optional file name for further identification or simply press **ENT**. Use the alphanumeric keys and the right/left arrows to enter file names. Press **Ent** when complete. Default file names are structured –NNMMDD.dld. Where NN is the DisplayMax sequential file number, MM is the Month, and DD is the day. Any characters of the default file name not overwritten will remain as part of the file name when the file is downloaded.

Each file is automatically time and date stamped and numbered with sequential file numbers.

You can save all of the special tests, i.e. C/N, Hum, Tilt, Ingress, and Leakage Measurement.

You can save scans of all tuning modes. You can also save the signal levels after checking against limits.

Check Results, however, are not saved. Once recalled or downloaded into the DisplayMax Download Software, data can be checked against the original or new sets of limits.

The 24 HR Tests are automatically saved.

The following data are recorded along with your measurements:

A sequential file number, your optional file name if entered, the time, date, meter serial number, employee id number, channel plan, measurement units, calibration offset, last factory calibration date, test point location, and the check limits.

Recalling and Deleting Files in the DisplayMax

Files can be recalled and displayed one at a time on the DisplayMax Display Screen. Once recalled, the data can be checked against limits by pressing the **F3 Check Key**. You can also change the test location by pressing **F4** and then recheck the data again by pressing **F3**. You can even edit the check limits in **Setup**, and then recheck the data.

Recalling Files:

Press the ‘Dload, Print, Recall, Delete’ key on the DisplayMax. A List of all saved files is displayed.

The first saved file is highlighted.

Scroll to a different file if desired.

Press **F3** to Recall the file and view it on the DisplayMax

Deleting Files

Individual files cannot be deleted. Once the DisplayMax memory is full, data can be downloaded for permanent archiving.

To delete All Files, Press **F4**, then **ENT**.

Using Download Software to Create Excel Spreadsheets

The Download Software package is not delivered with your DisplayMax. To receive a free copy, do one of the following:

- Download from our web-site, www.sadelco.com
- Download package can be emailed to you.
- Floppy disk with printed instructions can be mailed to you.

Note: Downloaded and emailed packages include full instructions as both ‘.doc’ and ‘.txt’ files.

Measurements made in any of the scanning modes (Full Scan, Zoom, Favorite, Sub, 24 Hour and Ingress) can be converted into Excel spreadsheets with pass / fail data. Single channel measurements (Single Channel, Single Frequency, HUM, C/N, Leakage, and Tilt) can only be downloaded using Microsoft Terminal or Hyper-Terminal. Microsoft Excel is required to view and print Excel spreadsheets. It is not required to download and create spreadsheets.

Download/Print Using Windows 3.11 Terminal

Connect the DisplayMax to the COM1 or COM2 9 pin port of an IBM type PC. A 9 pin to 25 pin adapter can be used if your computer only has a 25 pin port.

On the DisplayMax:

Make sure the Baud Rate is set to 9600.

Press FNC, Setup

Down Arrow to Communications.

Set the Baud Rate to 9600

ESC from Setup.

On your computer:

To Open Windows Terminal:

Double Click on Accessories

Double Click on Terminal Icon

Click on Settings

Click on Communications and select the following settings:

Baud Rate 9600

Data Bits 8

Stop Bits 1

Parity None

Flow Control None

Connector COM1 or COM2

OK

Click on Transfers, then Receive Text File.

Select a destination Directory and a destination File Name. Click OK.

On the DisplayMax:

Press the DLOAD, PRINT, RECALL, DELETE Key

Select a file using the UP/DOWN arrows

Press F2 PRT

Repeat for each file you wish to download.

Note: You can also download using the F1 DLD key, however, this key is intended for use with the DisplayMax Spreadsheet Software and will not download all of the file header information.

When the File Transfer is complete, Click on Transfers, Stop.

Exit Terminal

You can now Print the File using any word processing program.

Download/Print Using Windows 95/98 Hyper Terminal

Connect the DisplayMax to the COM1 or COM2 IBM PC 9 pin port.

On the DisplayMax:

Make sure the Baud Rate is set to 9600.

Press FNC, Setup

Down Arrow to Communications.

Set the Baud Rate to 9600

ESC from Setup.

On your computer:

To Open Windows Hyper Terminal:

Click on Start, Programs, Accessories, Hyper Terminal

Double Click on Hyper Terminal Icon

The Connection Description Screen appears.

Enter a name and choose an Icon for the new connection.

The Phone Number Screen appears.

Click on the down arrow of the "Connect Using Line"

Select Connect Direct to COM1 (or whatever COM port you are using)

Click OK

The COM 1 Properties Screen appears.

Select the following port settings:

Bits Per Sec 9600

Data Bits 8

Parity None

Stop Bits 1

Flow Control None

OK

Click on Transfers

Click on Capture Text

Select a destination Directory and a destination File Name. Click OK.

On the DisplayMax:

Press the DLOAD, PRINT, RECALL, DELETE Key

Select a file using the UP/DOWN arrows

Press F2 PRT

Repeat for each file you wish to download.

Note: You can also download using the F1 DLD key, however, this key is intended for use with the DisplayMax Spreadsheet Software and will not download all of the file header information.

When the File Transfer is complete, Click on Transfers, Stop. Exit Hyper Terminal.

You can now Print the File using any word processing program.

Note: Hyper Terminal will not automatically create a new file name for each transferred file. If multiple files are downloaded before clicking on Stop Transfer, they will all be in the same file. To create new file names for each transferred file, you must repeat Start and Stop Transfer for each downloaded file.

Printing Directly to a Serial Printer:

Note: Most printers are Parallel Type. The following instructions apply only to Serial Printers.

Connect the DisplayMax to a serial printer using the Sadelco PC Download Cable. P.N. CA10.

In Setup, Communications, Baud Rate: Match the DisplayMax setting to the fastest rate the printer will receive.

On the DisplayMax Panel: Press the DLOAD, PRINT, RECALL, DELETE Key, then Select a file using the UP/DOWN arrows

Press F2 PRT

Repeat for each file you wish to print.

24 Hour Testing

When activated, provides automatic, unattended testing.

The DisplayMax will scan and record all active channels of the selected channel plan.

The following parameters can be user adjusted either in Setup, see Section 7.0, or directly from the 24 HR Mode.

Parameter	Factory Defaults	Range
24 HR Test	OFF	
Current Time	HH:MM:SS	
Current Date	MM:DD:YY	
First Scan Delay	05 MINS	0 - 59 MINS
	00 HRS	0 - 4 HRS
Scan to Scan	00 MINS	0 - 59 MINS
	06 HRS	0 - 23 HRS
	00 DAYS	0 - 6 DAYS
Number of Scans	04 SCANS	1 - 99 SCANS (Maximum memory capacity is 43 scans)

The data is automatically recorded. Each scan is time and date stamped and named with its scan number.

After each scan, the DisplayMax automatically shuts itself off.

It is then automatically turned on each time a scan is scheduled.

During a 24 HR Scan, all keypad functions are locked out, including the Manual On/Off key.

In between scheduled scans, you may use the DisplayMax in its regular modes.

If the DisplayMax is in operation when a scan is scheduled, a pop-up screen prompts the user to select one of the following options:

Start Scan Now

Delay 5 Minutes

Abort This Scan

Abort Entire 24 Hr. Test

If no option is selected, the scan will begin after a one minute delay.

Scan results can be checked against limits in Recall, they can also be Downloaded and Printed.

DisplayMax Software allows checking and comparing of tests over time.

Important: After enabling the 24 HR Test in the setup menu, you must Press ESC to exit the menu and activate the test. If the meter is turned off before Escaping the menu, the 24 HR Test will not run.

Make sure there is sufficient battery power or connect the AC Charger before initiating a 24 HR Test.

Hum

The DisplayMax Hum detector is designed to measure Hum on unmodulated video carriers, unmodulated audio carriers and modulated (active) audio carriers. The proprietary algorithm requires 5 seconds to make a hum measurement.

The NCTA recommended practice is to measure Hum on unmodulated video carriers. Since this is not always possible, the DisplayMax can measure hum on active audio carriers. However, there are some limitations with this method.

Hum Measurement on Active Audio Carriers:

Tune to the desired channel in the single channel mode.

Press FNC

Press Hum

The DisplayMax automatically tunes to the audio carrier of the selected channel and measures all low frequency amplitude variations between 20 and 200 Hz.

Normal FM modulation on active, mono audio carriers (± 25 KHz) does not effect the Hum measurement. Over-modulation (excessive FM deviation) of mono carriers and the normal higher modulation of stereo carriers may result in erroneous Hum readings. Hum measurements should be made only on properly modulated mono audio carriers.

If the picture quality is good, and Hum readings are high on several channels, recheck Hum after turning off the audio modulation.

Hum Measurement on Unmodulated Audio carriers:

Turn off the audio modulation of the channel(s) to be measured.

Tune to the desired channel in the single channel mode.

Press FNC

Press Hum

Hum Measurement on Unmodulated Video Carriers: (preferred method)

Turn off the video modulation of the channel(s) to be measured.

Tune to the desired channel in the single channel mode.

Press F1 to switch to the Frequency Mode (tuning is now locked on the video carrier).

Press FNC

Press Hum

Note: Excessive cross modulation may also result in false high hum readings.

Note: If you don't like to HUM, whistling is an acceptable alternative, especially on a sunny day.

Carrier to Noise Ratio

Automatically measures the Carrier to Noise ratio of any active analog channel.
Press FNC, C/N

DisplayMax first measures the video carrier of the cursor channel. Then, it hunts for a quiet frequency for measuring noise. After finding this quiet frequency, DisplayMax samples the noise level over time, retaining the lowest level reading for noise. Carrier measurements are made with a peak detector. Noise measurements are made with an average detector. The noise bandwidth correction factor is applied automatically before the C/N is calculated and displayed.

Note: The sampling time required for accurate, on-line noise measurement will range from 20 to 60 seconds. During this time, a Wait Message will appear.

For carriers between 47 and 550 MHz:

C/N readings up to 45 dB can be made with carrier levels of 5 dB.

C/N readings up to 50 dB can be made with carrier levels of 10 dB.

For carriers between 550 and 862 MHz:

C/N readings up to 45 dB can be made with carrier levels of 10 dB.

C/N readings up to 50 dB can be made with carrier levels of 15 dB.

External band pass filters will improve C/N readings on fully loaded systems.

Pre-amplifiers may be required if carrier levels are too low.

Note: Automatic C/N measurements cannot be made on digital channels. However, the carrier level and noise level of digital channels can both be measured and recorded independently. To measure the noise of a digital channel, you must shut off the channel. Then measure it as you would a digital channel. After turning on the digital channel, measure it in the normal manner. Compare the average power level of the noise to the average power of the active digital channel.

Ingress Sweep (800 versions only)

Connect the DisplayMax to the Tap end of a cable drop to check the whole house for any unwanted signals that are either being generated in the house or are finding their way into the house wiring from some outside source.

DisplayMax sweeps the sub band in 250 KHz steps from 5.250 MHz to 40 MHz. You can adjust this frequency range. A narrower range increases the scan speed to help find intermittent ingress. See Setup Menu, Section 4.0, Ingress.

You can also adjust the Reference Line in Setup. This line lets you easily spot unacceptable ingress levels. It can be set anywhere from -35 to +60 dBmV.

Use the Right/Left Arrow Keys, or enter a frequency number to move the cursor to any frequency in the selected range for a precise reading. The frequency and levels for the cursor are displayed in bold numbers.

The DisplayMax keeps scanning and updating the level for each frequency sampled. The live levels are updated with each scan. The peak levels for each frequency are held until the Peak Clear Key is pressed, new tuning mode selected, or meter is turned off.

Note: The Displaymax automatically turns off after 5 minutes without a keypad entry. To monitor ingress for an extended period of time, first make sure there is sufficient battery life (or connect to charger), and second, disable the automatic shut-off in the Meter Operation Menu. (automatic shut-off is disabled when charger is plugged in)

Leakage Detector (CLI versions only)

There are two modes of leakage detection, Search and Measurement. The Search Mode is intended to help you locate leaks. The Measurement Mode, as the name implies, allows you to make calibrated leakage measurements.

Leakage measurement, even under the best circumstances, can be tricky. Environmental factors, intermittent leaks, and non-CATV transmissions make it difficult to pinpoint the source of leaks. Antenna considerations, distance and frequency make accurate measurements difficult.

The DisplayMax leakage detector incorporates the following features to help make locating, identifying, and measuring leaks easier:

- An audible tone with a pitch that varies with the relative strength of the leak.
- A slow audible warble tone which distinguishes video leaks vs. non-video leaks.
- A faster audible warble tone that helps identify specially modulated (tagged) channels.
- A video sync pulse filter that distinguishes video leaks vs. non-video signals.
- An adjustable squelch control.
- A built-in attenuator de-sensitizes the leakage detector for near field detection.
- A peak hold mode helps locate and record peak leakage levels.
- On screen tuning and distance adjustment.
- uV/M measurement automatically corrected for distance, antenna type and frequency.
- An adjustable bar graph threshold marker.

Leakage Detector Setup

The following parameters can be modified by the user in Setup, Leakage:

For both Search and Measurement Modes:

Default Frequency: The initial frequency the DisplayMax will tune on start up.

The factory default is 133.250 MHz. This is the video carrier of Channel 16 of the EIA channel plan.

If the current channel plan contains an active channel that matches the default frequency, the DisplayMax will tune to that video carrier and remain in the Channel Tuning Mode.

If there is no active video carrier at the default frequency (because it has been deleted or you are in another channel plan), the DisplayMax will tune to the default frequency and switch to the Frequency Tuning Mode.

Note: The length of your dipole must be adjusted for frequency. See chart below.

Default Mode: Determines which mode, Search or Measurement, will be activated on turn on. Once in the Leakage Mode, F3 toggles between modes.

Squelch: Use to block audio detection of very low level leaks.

Peak Clear: Default Manual setting, peak level indicators remain until manually reset using F2.

5 Sec Setting, automatically resets peak level indicators every 5 seconds.

Video Gating: Default setting of OFF allows detection of all types of signals. ON setting allows only video signals to pass.

For Measurement Mode Only:

Default Distance: The distance used in the automatic Leakage Measurement Calculation. It can also be changed during leakage measurements by pressing F4, then entering a new distance.

Threshold: Adjusts the bar graph threshold marker. Factory default is 20 uV/M.

Level Units: Factory default is uV/m. User can also select uV, dBmV, dBuV.

Antenna Select: Automatically selects proper antenna factor for the Leakage Measurement Calculation. In Leakage Search Mode, antenna select does not need to match the antenna type being used.

Antenna Factor: There are three programmed antenna factors, 100 for the dipole, 90 for the monopole and 65 for the rubber duck. These factors, which compensate for the lower relative gain of monopole and duck antennas, are automatically applied to the Leakage Measurement Calculation. While the FCC requires the use of a dipole antenna for official leakage measurements, this feature allows you to make approximate measurements using a monopole or duck. You can adjust each of these antenna factors to “calibrate” your specific measurement system (meter, antenna, truck mount, distance) using a calibrated leakage field.

Tone Identification

Before working in the field, we suggest you become acquainted with the various tones generated by the DisplayMax leakage detector. Connect the DisplayMax to a cable drop with a video carrier level anywhere from -20 to +0 dBmV. (higher signals will overload the detector).

Press FNC, Leakage to enter the Leakage Search Mode (use F3 to toggle from Leakage Measurement if necessary).

Press the CHN/FRQ key to switch to Frequency tuning.

Tune to an audio carrier (Channel 16 audio is 137.750) by entering the frequency number, then ENT.

To adjust the volume level, press FNC Left/Right Arrow. (Leakage has its own volume setting)

Listen to the steady tone. This is the tone you will hear when the signal is not a video carrier.

Now press the CHN/FRQ key again (DisplayMax automatically tunes to the video carrier of the channel)

Listen to the warble tone generated by a video carrier. This is the tone you are searching for when trying to find video leaks from your cable system.

Optional:

Some CATV systems use a special modulator that “tags” a specific channel to help differentiate their leaks from those of other systems or other signal sources.

If your system has such a “tagger”, tune to the video carrier of the tagged channel and listen to the warbled tone. You will notice that the warble generated by the tag is significantly faster than the warble of the normal video carrier. You may also still be able to hear the slower warble along with the faster one.

Antenna Considerations

Each antenna type has different characteristics. While only a dipole can be used for official CLI measurements, it is unwieldy and difficult to handle. Therefore, the rubber duck or monopole may be a better choice when calibrated measurements are not necessary or when searching. The Antenna Select feature in Leakage Setup automatically adjusts the leakage measurements for each antenna type. It has no effect on the operation when in the Leakage Search Mode.

Rubber Duck Antenna (Sadelco P.N. ANT01, included with all CLI versions of DisplayMax)

Used primarily to search for leaks in the home or in close proximity.

Not valid for making FCC CLI calibrated measurements.

Pick-up pattern is radial, with a null spot in direction antenna is pointing.

Half WaveVariable Dipole Antenna (Order Sadelco P.N. ANT02)

The only type valid for FCC CLI calibrated measurements.

Length must be adjusted for each frequency, see chart below.

Pick-up pattern is a horizontal, figure eight shape.

Elements must be extended and oriented parallel to the leak.

Channel	Frequency	Length of each element (from side of box)
98	109.275	24.9”
99	115.275	23.5”
14	121.2625	22.3”
15	127.2625	21.2”
16	133.2625	20.2”
17	139.250	19.3”

Quarter Wave Monopole (Order Sadelco P.N. ANT03)

Commonly used for vehicle mounted search applications, not prone to snag like a dipole.

Not valid for making FCC CLI calibrated measurements.

Pick-up pattern is doughnut shaped, most sensitive to leaks parallel to all its sides.

Not good for pinpointing the source of a leak.

Search Mode - hand held

Connect the Rubber Duck Antenna either directly to the F connector of the DisplayMax or using a three foot cable. (We recommend using the cable to allow easier movement of the antenna). A dipole antenna can also be used for a hand held leakage search. Be sure to hold the dipole horizontally. Rotate it on its axis to locate the leak source. The best reception will occur when the dipole is parallel to the leak. Keep in mind, the leak source could be on either side of the dipole.

Tune to a video carrier in the 108 – 140 MHz range. (Note: Channel 16 is the default setting in Leakage Setup)

Note: The DisplayMax uses a wide IF (280 KHz) for both signal level measurement and leakage detection. This eliminates the need to adjust channel tuning for aeronautical offsets in either signal level or leakage modes. Accurate readings are obtained by tuning to the standard frequencies of the video carriers.

Move the antenna through any area and along any cable where you suspect a leak.

Sources of leaks include:

- Splices and fittings which may be loose, corroded or damaged.
- Customer hook ups using low grade devices, no connectors, missing terminations.
- TV Sets, VCRs, and computers.
- Poorly made fittings.
- Damaged, compressed or low quality cable.
- Bad Converters.

Listen for any tone and watch the bar graph to determine if there is a leak.

The higher the pitch, the larger the leak. (Press FNC, Left/Right Arrow to adjust volume level)

At 3 ft, using the Rubber Duck antenna, the DisplayMax will pick up leaks equivalent to 4 uV/m at 10 ft.

No tone or bar graph indicates no leakage signal found.

Listen for a relatively slow warble tone.

It is important to differentiate leaks that are coming from your cable system from other signals that are in the air, such as motor noise, aircraft communications, etc. The Displaymax incorporates a proprietary feature (patent pending) that produces a 4 Hz warble when the received signal contains video (specifically, horizontal sync pulses). This feature allows the user to quickly identify the received signal as a valid cable leak, or dismiss it as a non-cable signal. Keep in mind however, that a cable leak may be masked by a larger non-cable signal. If a non-cable signal is narrow in bandwidth, such as a communications signal, it may be avoided by simply tuning to a different channel. Cable leaks should remain fairly constant within the Displaymax's leakage tuning range.

Locate the leak by moving the Rubber Duck around.

It will be most sensitive when held parallel to the leak and will null when pointed directly at the leak.

Listen for a faster warble on “tagged” channels.

Some cable systems employ a channel tagger that amplitude modulates one of the video carriers. This modulation, which is designed to help differentiate the source of a leak, can be heard as fast warble on the audio tone of the leakage detector. In order to differentiate this warble from the slower warble generated by all video carriers, we suggest you create a test leak of your tagged channel and listen to the warble it creates. With a little experience, you will be easily able to distinguish the faster warble of most tagging systems. Tagged channels are helpful in overbuild situations where a cable leak may be from one of two systems.

Reduce the leakage detector gain if necessary.


If the leak is very large, or you are very close to the source, (bar graph has peaked all the way to the top), you may need to reduce the gain of the DisplayMax. Just press the F4 key to reduce the gain by 20 dB.

Change channels.

If you are still unsure of the source, change channels to see if the leak persists. Most cable leaks will be detectable on more than one channel.

Switch on the Video Gating in Leakage Setup (Optional)

This filter is sensitive to the video sync pulses of TV signals. If the tone and bar graph do not change when the video filter is switched on, this indicates that the measured signal contains these sync pulses and is a TV signal. If the tone and bar graph disappear when the video filter is activated, the measured signal does not contain sync pulses and therefore is not a TV signal. This does not guarantee that there is no leak of the CATV system. It is possible for there to be both video and non-video signals present at the same time. If the non-video signal is larger than the CATV leak, it will mask the detection of the leak, just as a large CATV leak masks the detection of smaller leaks.

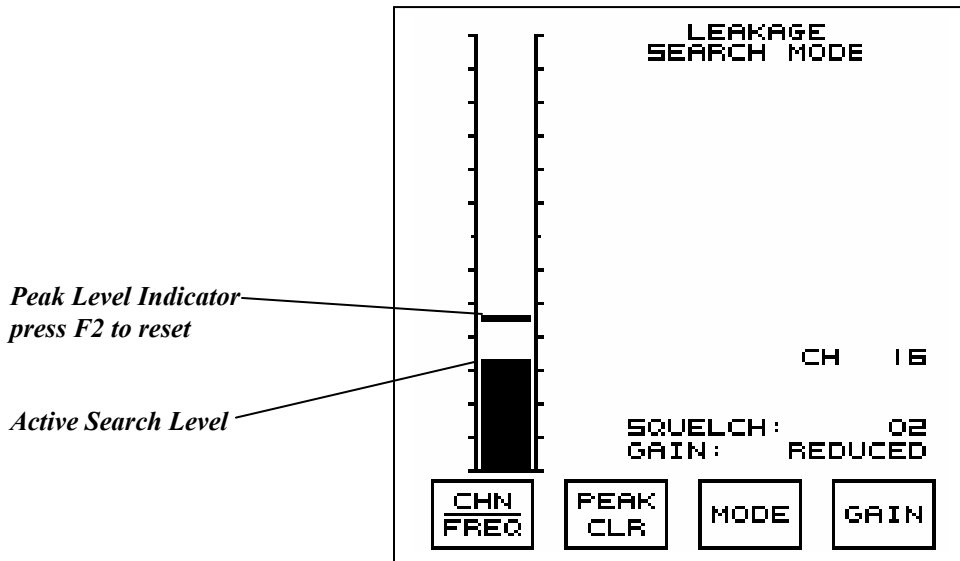

Search Mode - from a Vehicle

The DisplayMax can be used for patrolling your CATV plant to locate leaks and meet FCC ride out requirements. However, once a leak has been located, measurements must be made from outside the vehicle. Instructions for calibrated leakage measurement can be found in the next section of this manual. **However, the first task is locate a leak. For rough location purposes, you may use a roof mounted monopole or dipole antenna.**

Roof mounted dipole antennas should be oriented in the direction of travel. Care should be taken to not catch overhead trees. Dipoles should be positioned as close to the cable as possible (passenger side of the roof).

Roof mounted monopole antennas should be mounted in the center of the roof as long as there are no other conductors which would effect its performance. If your vehicle is equipped with roof mounted ladder racks, or a bucket, you may want to experiment using a known leak to find the optimal position for the monopole.

Signal leaks are often hard to locate. Rain and wet ground, temperature changes, and wind can all effect the level of leaks. Leaks may be active one day, and gone the next. Generally, RF leaks will follow the path of lowest resistance. This can be through space, or along strand, telephone or power lines.

Signal leaks propagate in waves. These waves create patterns of rising and falling leakage radiation along the cable. A single leak can therefore appear as a series of leaks as you drive parallel to the cable. Most leaks will be greatest near their source. One way to find the source is to slowly travel along the cable while monitoring the rising and falling pitch of the DisplayMax. The peak hold function of the display will also help you identify the location where the leak is strongest.

Conversely, what may seem to be one large leak, may be the composite signal of many leaks. It is vital to locate the largest leak, repair it, and then search again for other smaller leaks that may have been masked by the large one.

Pinpointing the exact source of a leak can be difficult. Once in the general area of a suspected leak, it is often best to leave the vehicle and follow the techniques for hand-held searching. Triangulation, using a hand held dipole antenna, is often effective.

Measuring Leaks

The FCC requires that all leaks greater than 20 uV/m, at 3 meters, must be documented and fixed in a reasonable amount of time. Additionally, all leaks greater than 50 uV/m, at 3 meters, are to be included in the annual ground based CLI calculation.

As mentioned earlier, making correct leakage measurements can be tricky. Many factors effect the measurement, including the antenna type, frequency, distance from the leak, distance from the ground, reflections from other objects, and interference from other signals.

Therefore, the FCC has prescribed the following measurement requirements:

The measurement instrument must be able to detect leaks of 20 uV/m at 3 meters.

The leak must be measured using a dipole antenna.

The measurement should be made 10 feet from the leak.

The measurement should be made 10 feet off the ground.

The measurement should be made at least 10 feet from any other conductors.

To measure a leak using the DisplayMax:

Tune to the video carrier of a channel between 108 and 140 MHz.

Attach a dipole antenna of the correct length for the chosen frequency.

Select the Leakage Measurement mode.

Verify that 10 ft has been selected as a distance factor.


Extend the non-conducting, telescoping mast to 10 feet. (KEEP AWAY FROM ALL POWER LINES)

Orient the dipole so that it is parallel to the leak.

Rotate the antenna to achieve the highest, peak level. (Using the audio pitch and peak hold as aides)

Record the leak level manually or using the DisplayMax Save function.

Note: If it is impossible to locate the antenna 10ft from the leak, you may make the measurement at another distance. Be sure to select the proper distance on the DisplayMax and document the reason for making the measurement at an alternate distance. The DisplayMax automatically corrects the measurement for the selected distance.

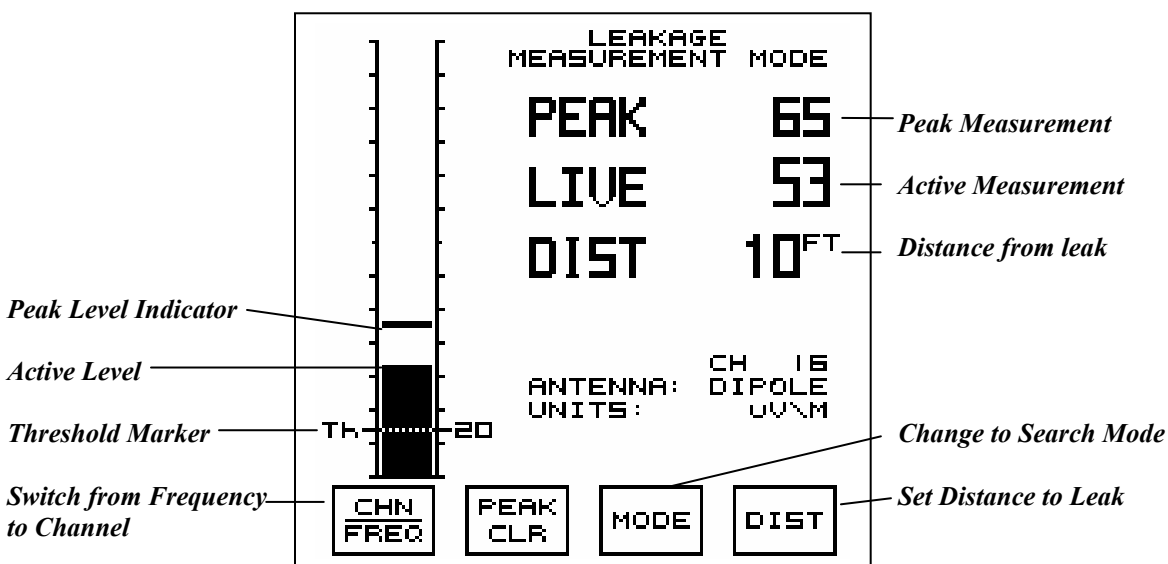

Appendix A: Specifications

FREQUENCY

Range:

600 and 600 CLI packages: 47-600 MHz

800 and 800CLI packages: 5-872 MHz

Accuracy: ± 20 KHz

Resolution: 125 KHz

IF Bandwidth: 280 KHz

ANALOG CHANNEL MEASUREMENT

Range: -30 to +60 dBmV

Accuracy: ± 1.0 dB, at 77° F (Typ ± 0.5 dB)

± 2.0 dB, 0 to 120° F (Typ ± 1.0 dB)

Resolution: 0.1 dB

LEAKAGE MEASUREMENT

(CLI Packages Only)

Tuning Range: 108 - 140 MHz

Resolution: 25 KHz

Measurement Range: 5 – 5000 μ V/M

at 3 Meters with dipole antenna

Accuracy: ± 1.0 dB at 77° F (Typ ± 0.5 dB)

± 2.0 dB, 0° to 120° F (Typ ± 1.0 dB)

Audio: Warbled tone allows easy identification of tags and video.

Variable pitch aides peaking.

INGRESS SWEEP

Sweeps Sub Band in 250 KHz steps.

DIGITAL CHANNEL MEASUREMENT

Average Power Accuracy:

± 1.5 dB at 77° F (Typ ± 0.75 dB)

± 2.5 dB, 0° to 120° F (Typ ± 1.25 dB)

Type: QAM, QPSK, VSB, and QPR

AUTO CALIBRATION

Internal precision noise reference maintains calibration over product life. Compensates for changes due to turn-on drift, temperature, and aging of components.

AUTOMATED TESTING

Scan Rate: 6 Carriers/sec

Storage: 43 Scans of 135 Channels each
99 Single Channel Measurements

C/N

Range: 50 dB with carrier level of +15 dB

Accuracy: ± 2.0 dB at 77° F

± 3.0 dB 0° - 120° F

HUM

Range: 0 – 5%

Filter: 20 - 200 Hz

TILT

Automatically calculated from user
Selected carriers.

AUDIO

Adjustable Volume, waterproof
mylar speaker

GENERAL

Dimensions:

4.25" Wide x 10" Long x 2.75" Deep

11 cm x 25.5 cm x 7 cm

Weight:

4.25 lbs (1.9Kg) including case and batteries.

Operating Temperature: 0° - 120° F

-18° - 49° C

Storage Temperature: - 4° - 140° F

-20° - 60° C

BATTERY

Type: 6 high energy sub C Nicad

Charge Time: 2 Hrs for 75% Charge

4 Hrs for 100% Charge

Battery Life: 4 Hrs Continuous

(backlight off)

Electronic Shut-Off: Saves power,

Extends operating time.

STANDARD CHANNEL PLANS

EIA (NTSC), HRC, IRC, AIR (VHF,UHF) PAL,

Custom plans available on request.

Specifications subject to change without notice.

Appendix B: Accessories

ACCESSORIES SUPPLIED at no additional charge

Description	Sadelco Part Number
Padded Nylon Case	CASE05
110Volt AC Charger	T70
Nicad Battery Pack	BAT07
12 Volt Car Charger Cable	CH04
Operator's Manual	ST1008
Rubber Duck Antenna (supplied only with CLI packages)	ANT01
Download Software for Excel	SW01

OPTIONAL ACCESSORIES

Description	Sadelco Part Number
Strandhook/Handle	SH02
PC Download Cable	CA10
Clone Cable	CA20
220Volt AC Charger	T70E
Variable Dipole Antenna w. 10 Ft. extension pole	ANT02
Magnetic Vehicle Mount Monopole Antenna	ANT03



Appendix C: Cable Wiring Diagrams

Sadelco Part No. CA10

PC Download Cable

Use to connect a DisplayMax to an IBM compatible PC.

- 1 DCD 1
- 2 RXD 2
- 3 TXD 3
- 4 DTR 4
- 5 GND 5
- 6 DSR 6
- 7 RTS 7
- 8 CTS 8
- 9 ----- 9

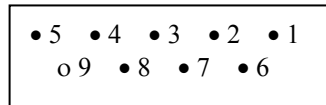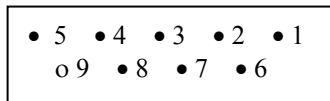



Note: 9 pin to 25 pin adapters are available for computers that have only 25 pin connectors.

Sadelco Part No. CA20

Cloning Cable

Use to connect one DisplayMax to another for cloning user setups.

- 1 DCD -- DTR 4
- 2 RXD -- TXD 3
- 3 TXD -- RXD 2
- 4 DTR -- DCD 1
- 5 GND -- GND 5
- 6 ----- 6 Pin 6's can be connected or not
- 7 RTS -- CTS 8
- 8 CTS -- RTS 7
- 9 ----- 9 Pin 9's can be connected or not

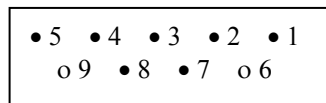
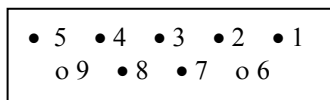


Sadelco Part No. CA30

Modem Cable

Use to connect DisplayMax to a standard 25 pin modem for remote operation.

- 2-----2
- 3-----3
- 4-----8
- 5-----7
- 7-----5
- 8-----4
- 20----1
- 6 -----6 Pin 6's can be connected or not
- 9-----9 Pin 9's can be connected or not

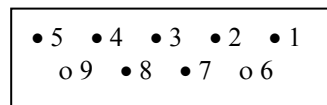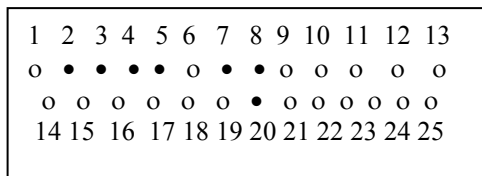

Appendix D: Trouble Shooting Guide

The following trouble shooting guide will help you solve many common problems. If you need additional assistance, call Sadelco toll free from anywhere in the USA at 1-800-569-6299. Worldwide, call 1-201-569-3323 or e-mail us at sadelco@aol.com.

Meter won't hold a charge:

Make sure you are using correct charger. Sadelco P.N. T70. 1 amp, 12VDC output, center pin positive.

Make sure electrical outlet is active overnight.

Make sure meter is turned off during charging.

Charge for a minimum of 4 hours.

Verify Charger not defective: With charger plugged in and meter turned on, battery voltage should read 8.4V.

Signal Level reading is incorrect:

Make sure correct channel plan has been selected.

Make sure analog and digital channels are set properly in Edit Channel Plan Menu.

Check measurement units in Meter Operations Menu. (dBuV will read 60dB greater than dBmV)

Check "F" connector for wear or dirty contacts. Replace if necessary.

Cycle power to re-initialize meter and trigger an auto calibration.

Meter does not compensate for test point offsets.

Some HRC/IRC systems add digital channels using standard EIA modulators.

Leakage reading is incorrect:

Listen for 4 Hz warble tone. If warble tone not present, the received signal may not be a leak from your system.

Make sure original type F-connector is used, with short end connected to meter. Also use flat and star washer with star washer making contact with metal housing.

Place duck antenna on a small jumper cable (2 to 3 ft).

If in the measurement mode, make sure the correct antenna and antenna factor are selected.

If in the measurement mode, make sure the correct distance to leak is entered.

Display Screen is too dark, too light, or not sharp:

Use FNC, UP Arrow, or FNC Down arrow to adjust screen contrast.

Use FNC, Light to turn backlight on.

Adjust backlight brightness in Setup, Meter Operations.

Cycle power to re-initialize meter.

Display locks up, keys do not work:


The keypad is automatically locked during carrier to noise and auto-calibration operations, this is normal. Carrier to Noise can take up to 60 seconds to sample and find lowest noise reading.

If the keypad is locked up at other times, cycle power using the ON/OFF key.

On power-up, meter locks on the Sadelco logo screen: Indicates an internal signal path problem. Return meter to Sadelco.

If the ON/OFF key is locked in the ON position and will not allow you to cycle power:

Short pins 5 and 9 of the RS232 connector by touching them together momentarily with any metal object. This will manually re-initialize the microprocessor. The meter will turn off for a moment, then turn itself on. The keypad should now function normally.

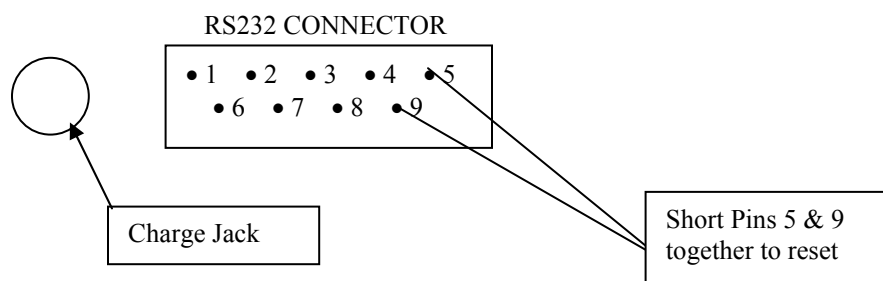

Notes

Notes